

WB2X9154 Igniter Kit

WARNING

Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before
operating.
Failure to do so can result in death
or electrical shock.



WB2X9154 Igniter Kit Consists Of:

- 1 Igniter
- 2 Wire Connector (Ceramic)
- 1 Screw, 8-18 x 5/16
- 2 Screw, 8-32 x 3/8
- 2 Screws, 10-32 x 3/8
- 1 Mounting Bracket
- 1 Instruction Sheet

NOTE: Igniter filament extremely fragile. Use caution when installing igniter to prevent breakage. Check the rating plate on the safety valve to make sure the amperage for the gas valve is compatible with this igniter (2.5 – 3.0 amps). Make sure the distance from the igniter to the burner is the same to insure proper ignition.

1. Remove all parts necessary to provide access to defective igniter.
2. Remove the two (2) mounting screws that attach the igniter bracket to the back of the oven cavity. See *Figure 1*.
3. Gently pull the igniter toward you until the wire connectors have been pulled through the opening in the back of the oven cavity. Unscrew the wire connectors, disconnect the faulty igniter, and discard the igniter and the wire connectors. See *Figure 1*.

4. You are responsible for determining if the new igniter can be installed with the existing mounting bracket or if another bracket is necessary. If you need to use the mounting bracket included in this kit to install the igniter, use the 8-18 screw to attach the igniter to the bracket. See figure 1.

NOTE: Be sure to use the ceramic wire connectors from the kit. **DO NOT** reuse the connectors that were with the appliance.

5. Reattach the wires the same as the old igniter, using the ceramic wire connectors enclosed in kit. See *Figure 1*.
6. Remount new igniter and bracket assembly to the rear of the oven cavity, using the two (2) 8-32 x 3/8" mounting screws enclosed in the kit. See *Figure 1*.

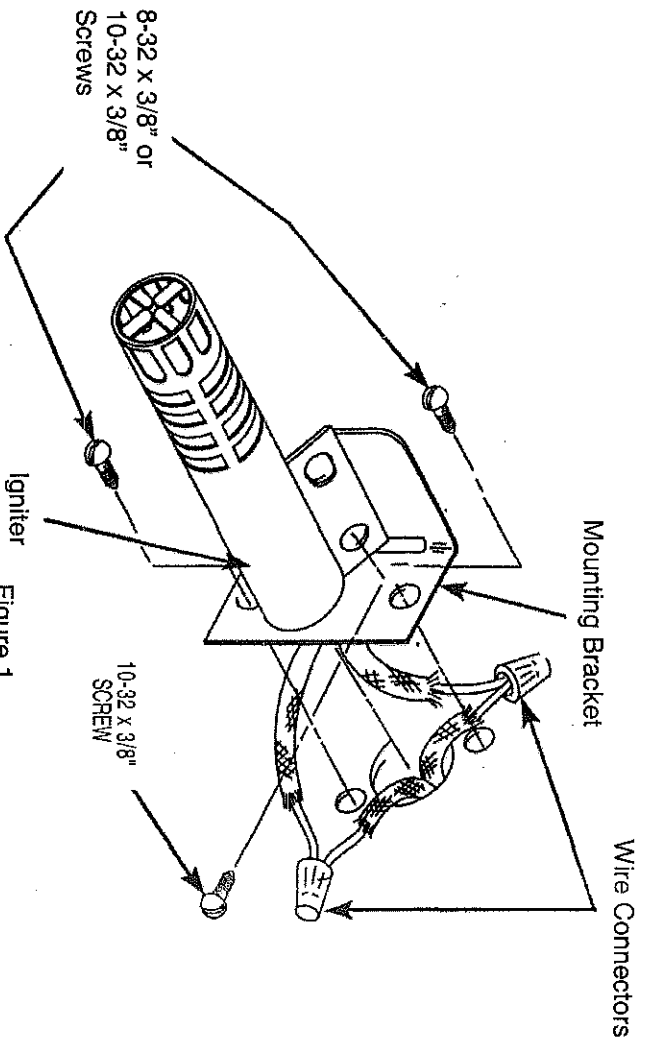


Figure 1