



#8544742

INSTRUCTION SHEET for Blower Belt Replacement

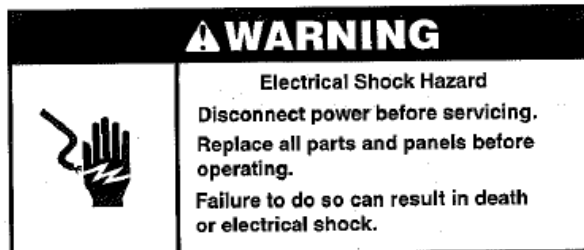

1. Unplug dryer or disconnect power.
2. Gain access to lower portion of dryer by first lifting the top and console assembly from the dryer cabinet.
3. Remove the front panel assembly.
4. To replace the blower belt, place one end of the belt around the blower motor pulley located behind the flywheel of the motor.
5. Stretch the other end of belt around the blower pulley starting from the front side of the pulley. Make sure the belt is NOT in contact with the fin on the blower housing after installation. Check to make sure the rib side of belt is in contact and centered on both pulleys. See illustration below.

NOTE: To aid in installation, rotate blower pulley or flywheel in a clockwise direction while stretching the belt around the blower pulley.

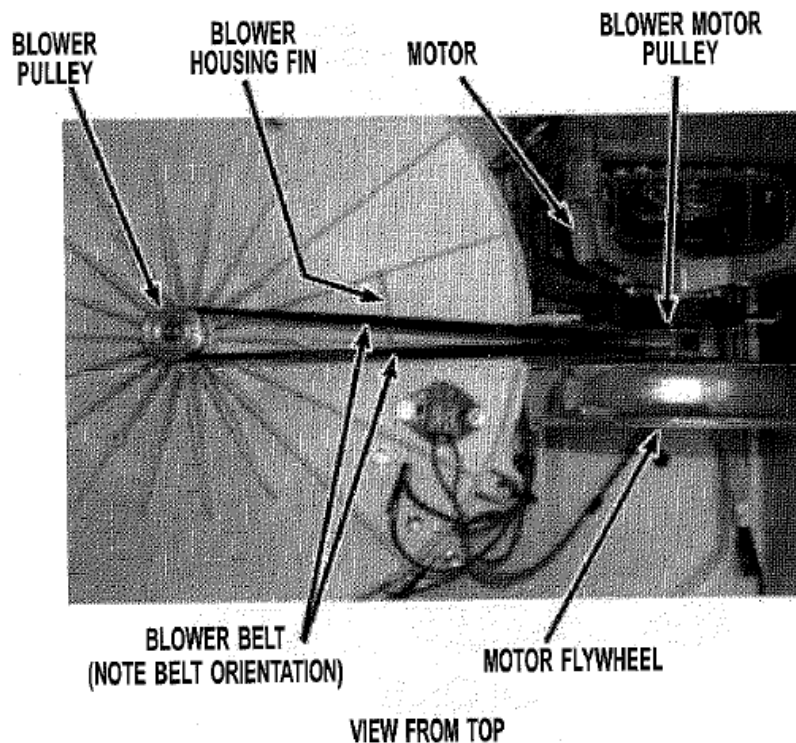

6. Replace all panels in reverse order.
7. Plug in dryer or reconnect power.