


# Instruction Sheet For Control Panel Switch Replacement

<b>⚠ WARNING</b>	
	<p><b>Electrical Shock Hazard</b></p> <p>Disconnect power before servicing. Replace all parts and panels before operating.</p> <p>Failure to do so can result in death or electrical shock.</p>

1. The button is adhered to the switch on the original part; the only way to remove the button from the switch is to break the shaft of the switch. A pair of pliers may be required to remove the button.
2. To remove the switch from the panel, the locking tabs that hold the switch in place must be released to prevent damage to the control panel.
3. The three (3) switches look similar, but function differently, you must ensure that the service replacement switch is in the same location as the original switch.
4. Assemble the replacement switch to the control panel.
5. Put one drop of adhesive in the button slot, slide the button completely onto the switch shaft from the front side of the control panel.
6. Hold in place for 30 seconds.
7. Reassemble the dryer.

