

INSTRUCTION FOR INSTALLING AND ADJUSTING NEW FLOAT VALVE

1. Install the float valve into the right hand side slot on the basin. Move the valve all the way down to the bottom of the adjustment slot and finger tighten locking nylon nut on the outside of the basin.
2. Loosen the butterfly nut on the elbow of the float, push upper arm to the top position and allow the bulb to drop until it touches the bottom of the basin.



3. Connect water supply line to the float, tighten compression fitting and turn on the water.
4. Gently slide the valve upwards in the adjustment slot until the water starts flowing. Allow basin to fill and adjust the valve to correct level with disc wheel in place.