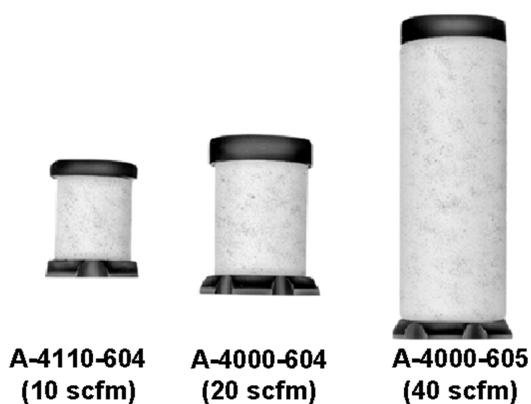


Table 5: Repair Parts

Description		Code Number
Coalescing Filter Elements	10 scfm (4.7 l/s)	A-4110-604
	20 scfm (9.4 l/s)	A-4000-604
	40 scfm (18.9 l/s)	A-4000-605
Charcoal Filter Elements	10 scfm (4.7 l/s)	A-4000-632
	20 scfm (9.4 l/s)	A-4000-633
Filter Auto-Drain Kit (All Coalescing Filters)		A-4000-6010

Servicing Procedure for Coalescing Filters

All coalescing filters are equipped with an automatic drain from which accumulations of entrapped liquids are automatically blown out. The filter element should be replaced when the leaving air pressure gauge (mounted on the PRV station charcoal filter head) indicates less than 50 psig (350 kPa) the differential pressure between the leaving and input gauges is 15 psi (105 kPa) or more, or after one year of service—whichever occurs first.

**Figure 13: Coalescing Filter Elements**

A-4000-633 (20 scfm) **A-4000-632 (10 scfm)**

Figure 14: Charcoal Filter Elements