



Replacement Procedure for TH559ED V514 & TH559ED V515 TH559ED V531 TH559ED V532


TH559ED V536

(Glass and Packing set)


(Sensor)

Removal Procedure

- 1 Remove the Top Cover from the Valve Body and disconnect the Connectors of the Solenoid Valve and the Generator.
- 2 Remove the Back-up Battery and the Controller from the Top Cover.
- 3 Remove the Sensor from the Sensor Holder by using Slotted Screwdriver.

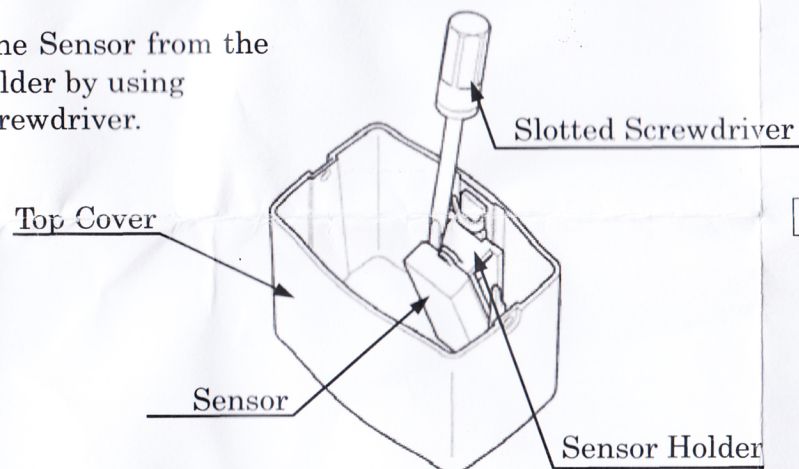


- 4 Remove the (Old) Glass by using Allen wrench.

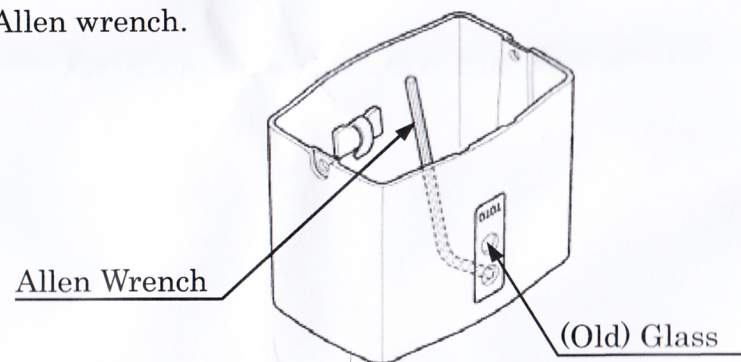


Attachment Procedure

- 5 Attach the Double-faced Adhesive Tape on the proper area of the Sensor.

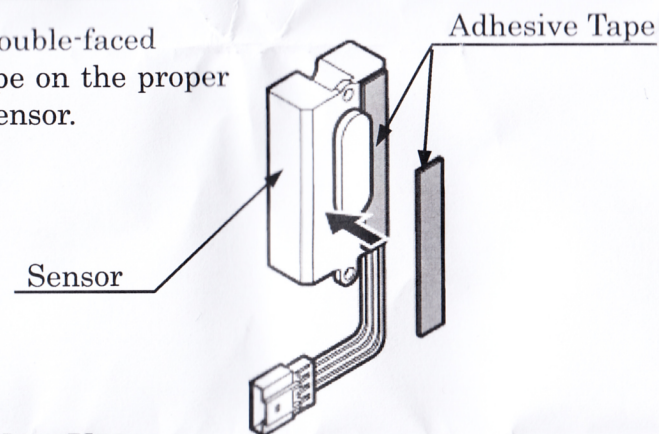

- 6 <TH559ED V514/V531>
Attach the New Glass on the Sensor Holder's surface securely.
<TH559ED V515/V532/V536>
Attach the Sensor on the Sensor Holder securely.

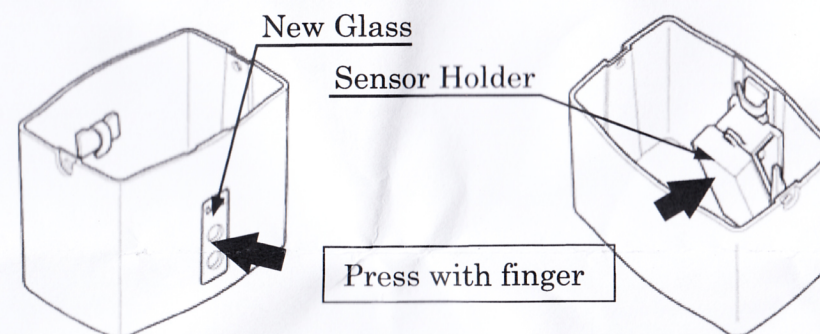

- 7 Attach the Back-up Battery and Controller on the Top cover.
- 8 Connect the Connectors of the Solenoid Valve and the Generator and mount the Top Cover on the Valve Body.