



180, 3^e Avenue, L'Islet, Quebec, G0R 2C0, CANADA
 Tel.: (418) 247-3947, 1 800 463-7043
 Fax: (418) 247-7801
www.ouellet.com

INSTRUCTIONS

For installation of the options:

- OVS-TB1 (single-pole)
- OVS-TB1-AV (tamperproof)
- OVS-TB2 (double-pole)
- OVS-TB2-AV (tamperproof)

INSTALLATION:

- 1- Remove front cover.
 - 2- Screw the thermostat to the bracket included in the kit (TB1 and TB1-AV only).
 - 3- Connect the thermostat to the unit according to the wiring diagram (Fig. 1a or 1b) and the drawing (Fig. 2a or 2b).
 - 4- Make the electric connections of the unit according to local and national codes in force. Refer to the wiring diagram (Fig. 1a or 1b).
 - 5- Screw the bracket of the thermostat to the lower section of the junction box with the supplied screws.
- NOTE for TB2 and TB2-AV only:**
 Insert the cardboard insulator between the thermostat and the side of the recess box.
- 6- Replace front cover of heater before testing the heater.

THERMOSTAT SETTING:

The setting of the built-in thermostat can be done with the supplied knob (TB1 or TB2) or through the upper bar grille with a small slotted screwdriver if you have a tamperproof thermostat (TB1-AV or TB2-AV).

To set the thermostat at the desired temperature:

- Set thermostat at maximum temperature (turn clockwise).
- When the desired temperature is reached, turn the thermostat counter-clockwise slowly until you hear a "click".
- The thermostat will keep this room temperature.

KEEP THIS INSTRUCTION PAMPHLET
 FOR THE USER INS29-200301-04

Fig. 2a : Drawing

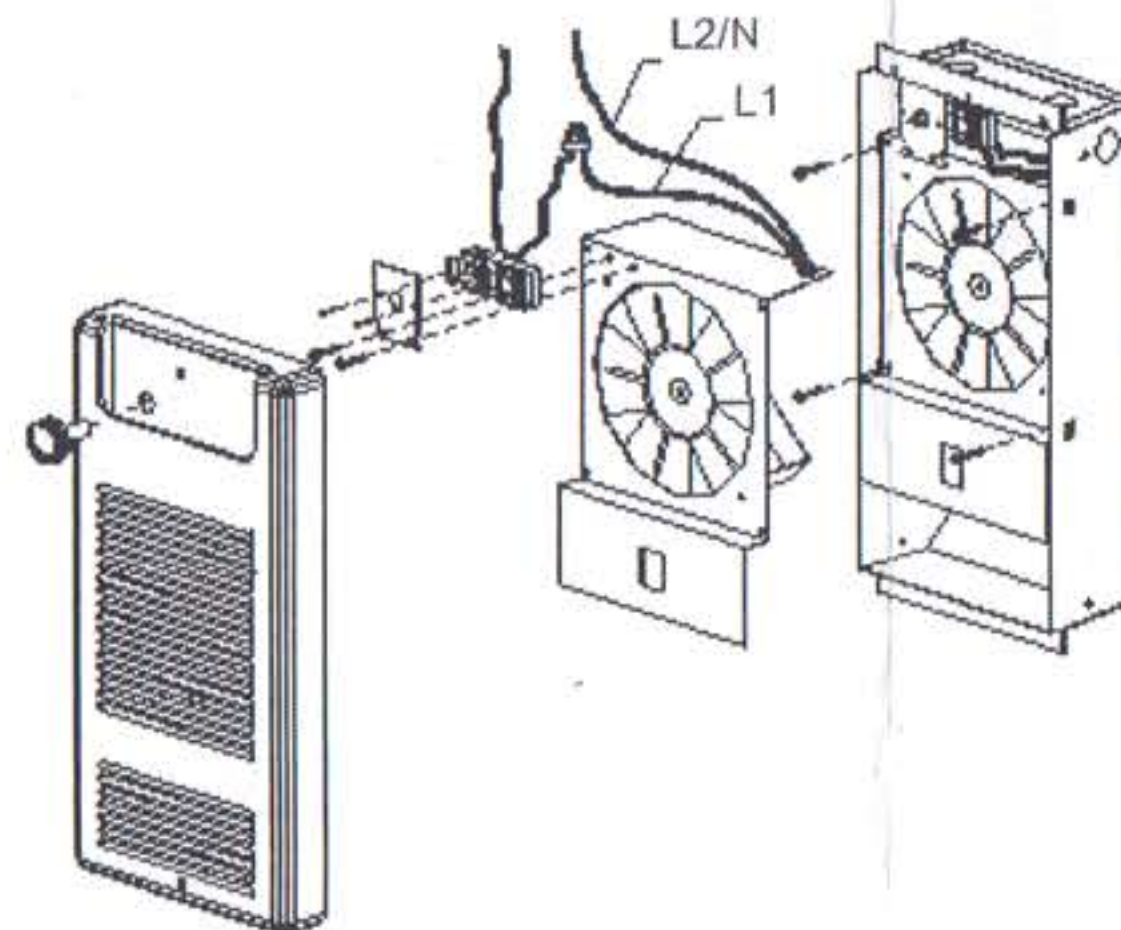


Fig 2b : Drawing double-pole thermostat

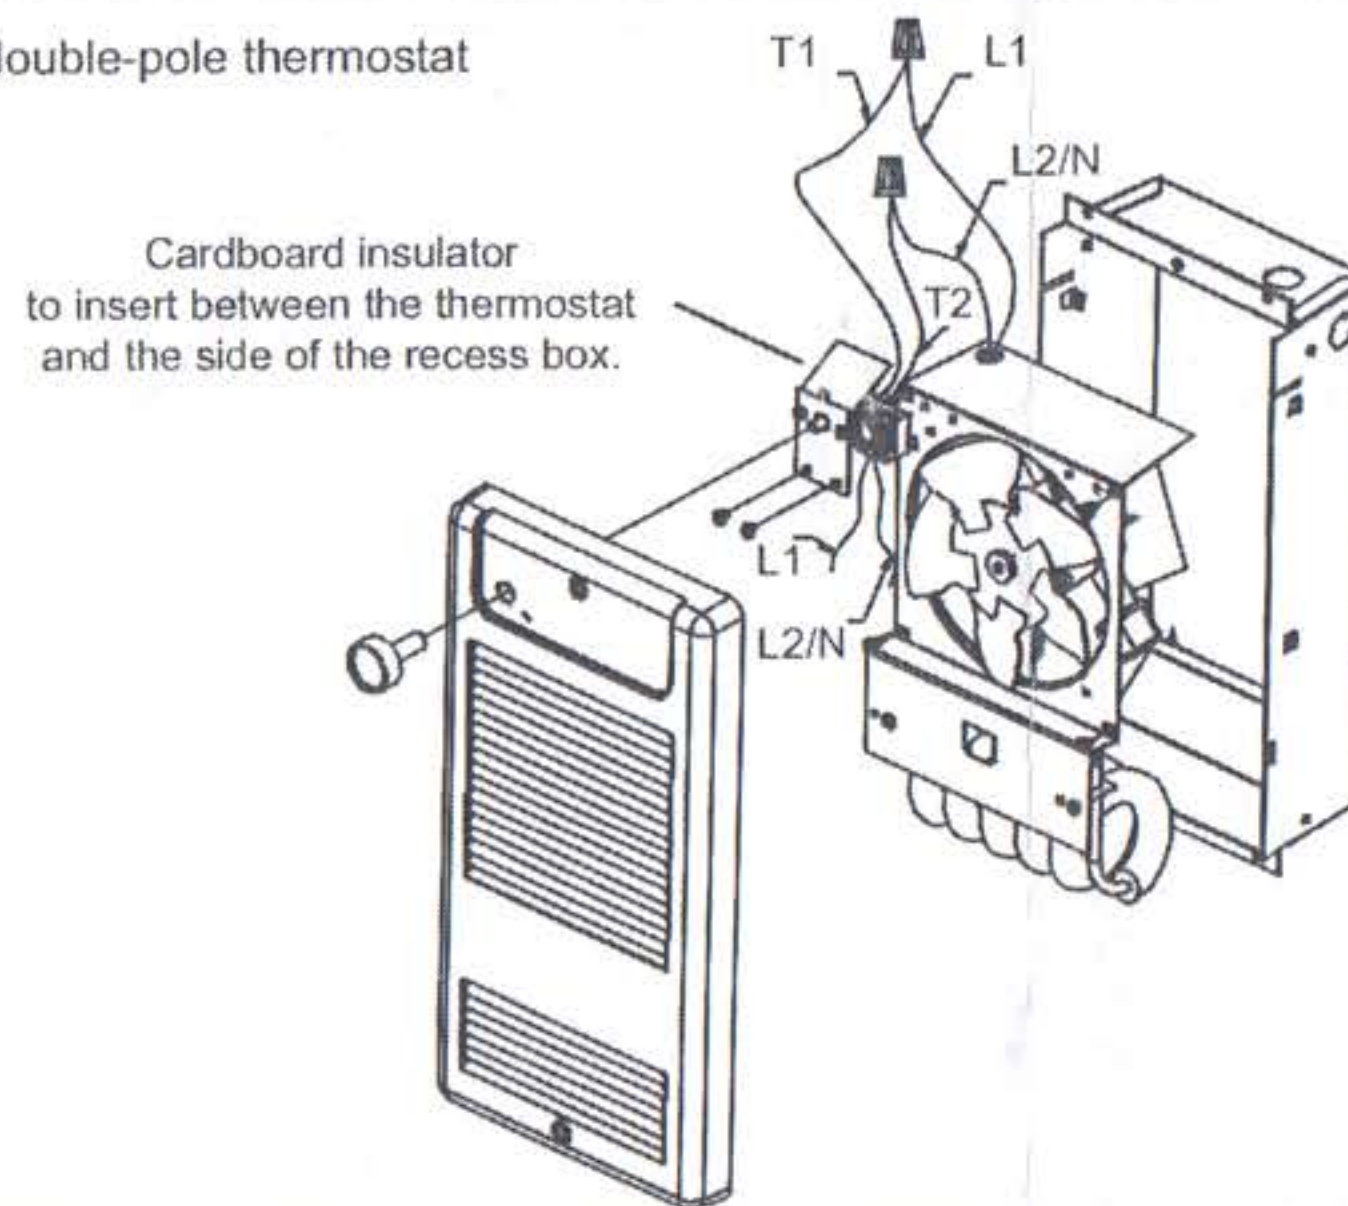


Fig 1a : Canadian version

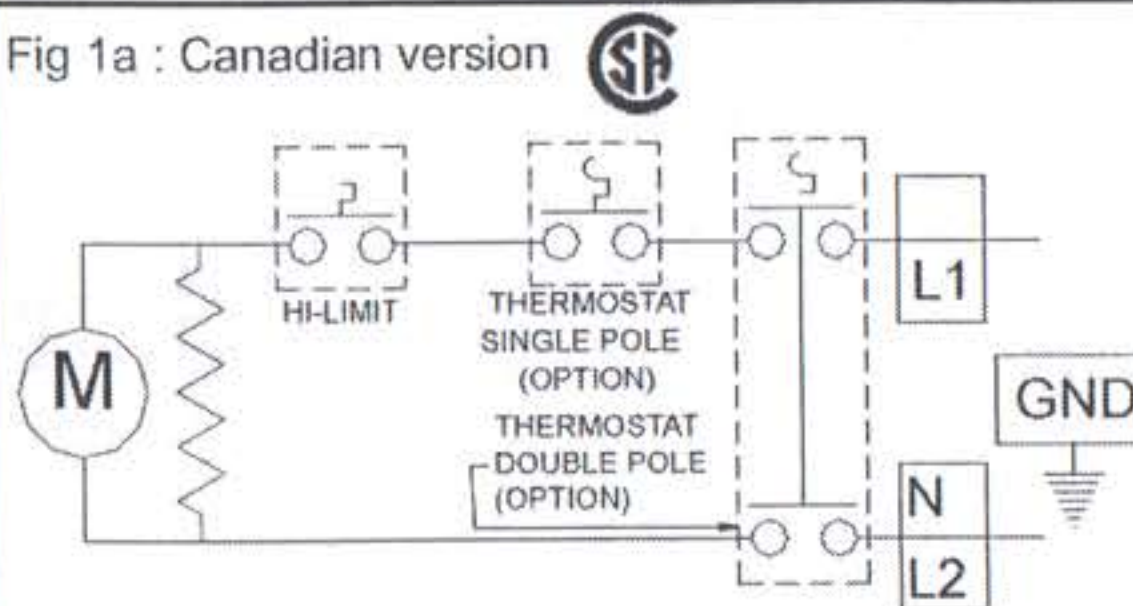


Fig 1b : American version

