

Instruction Sheet

314705

574VD-0186

This instruction sheet is to be used with:


REPAIR PART NO.: 306436**DESCRIPTION: DRYER DOOR LATCH KIT**

To install a new door latch kit, the front panel will need to be removed from the dryer.

Unplug the dryer.

FRONT PANEL REMOVAL

1. Remove screws.

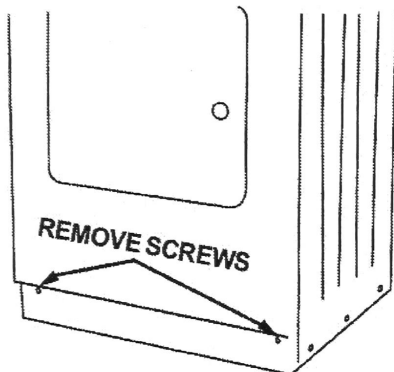

2. Lift up on front panel and swing bottom of panel away from dryer to disengage top of panel from dryer top.
3. Front panel may be set to one side. If necessary, the door switch wires may be disconnected and the front panel removed completely from the unit.

REMOVE DOOR CATCH (304578)


Using a pair of pliers, squeeze the expanded portion of the strike and push out of the slot.

INSTALL DOOR CATCH

1. Place the expanded end of the door catch into the slot in the front panel and press firmly.
2. Reinstall front panel and screws.

DOOR STRIKE REMOVAL

1. Open door.
2. Support door and remove two screws from doorknob side of door. Also, remove screw from doorknob.
3. Spread door halves.
4. Using a pair of pliers, squeeze the expanded end of the strike together. Then push it out through the slot in the door.

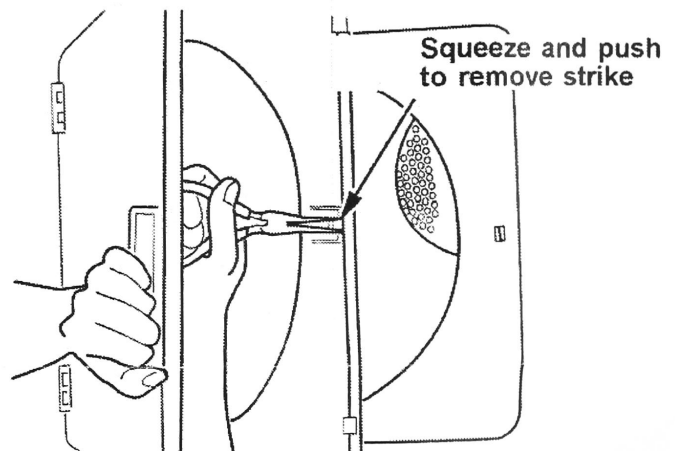

INSTALL DOOR STRIKE

1. Insert the expanded end of the door strike into the slot and press firmly through both the door and the metal backup plate.
2. Squeeze door halves back together and reinstall screws.

Reissued: 07/99