

Replacing Your Rack Rollers

154348801

CAUTION



Cut Hazard
Slides can be sharp and may cut.
Failure to follow this warning may result in injury.

To Replace Rack Rollers:


1. Remove the rack slide caps.
 - Note snap feature at bottom of cap.
 - Pull the base of the cap forward to release it.
 - Pull up and out of holes in end of each slide.
2. Pull rack and rollers out of stainless slides.
3. Remove original rollers and bushings from top rack by firmly pressing against to unsnap.

Note: Please do not use a sharp object that might cut the rack coating.

4. Snap new rollers and bushings on rack wires.
5. Pull stainless slides out to fully extended position.
Inspect the slides for warp or bow. If they are not straight, replace them with the slides in the kit. (Use step 1 to remove back slide caps.)
6. Insert rack and rack rollers into slides.
7. Insert caps in slides and snap them closed by placing your index finger behind the cap and your thumb over the front of the cap and squeezing.

If the rack is still difficult to pull out, replace the 8 tub rollers that support the rack slides with the roller/screw/washer assemblies in the kit. You will need a T-25 Torx bit for this task.

Rack Slide Cap

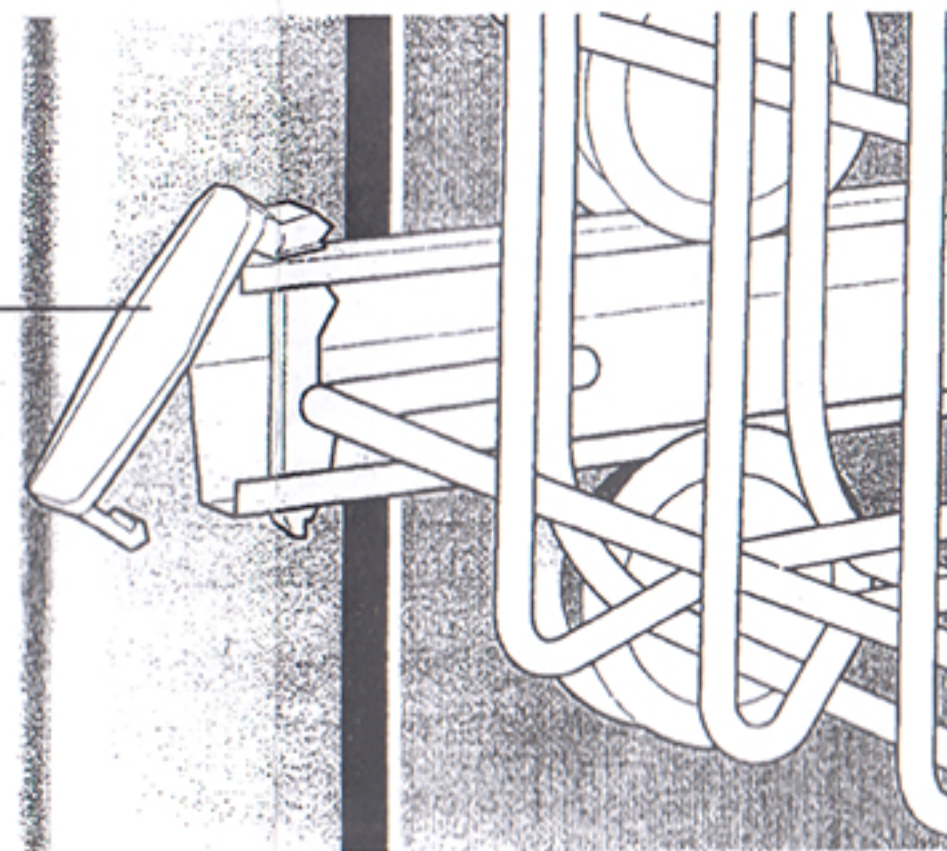

Tub Roller

Stainless Slide

