

## SHF - SHL - SHM Series Heating Thermostats

This Thermostat is engineered for air steam or surface installation.

## **Air Steam Mounting Instructions**

This thermostat may be installed as it is furnished.

## **Surface Mounting Instructions**

Insert the two spacers, furnished in the kit, between the screw holes in the thermostat flange, and the heating surface. Install the screws and tighten securely,

When using the wide flange adapter plate, twist the thermostat so that both tips of the small flange are positioned under the locking tabs of the adapter plate.

## SEALED UNIT PARTS CO., INC.

2230 Landmark Place • Allenwood, NJ 08720 (732) 223-6644 Fax (732) 223-1617 E-Mail: info@supco.com Website:www.supco.com