

FREEZER CONTROL INSTRUCTIONS


The SUPCO SC1002 Temporary Cold Control will enable you to operate the freezer until you obtain a replacement thermostat.

The temperature range from numbers 1 to 9 on the dial will supply ideal temperatures for freezers.

The SC1002 has a rating of 80 amps LRA and 20 amps FLA and can be used on units up to 1/2 H.P.

INSTALLATION:

1. Disconnect all electrical power and remove defective thermostat.
2. Connect wires from defective thermostat to the SC1002 using the plastic sleeves. If the wires from the cabinet do not have male connectors, splice wires and use the wire nuts.
3. The ground wire must be connected to the metal frame of the appliance to prevent any shock hazard.
4. Set control knob to the proper temperature range. It may take more than 2 hours for the temperatures to stabilize and for the unit to cycle-off.
5. Adjustments for temperature accuracy (warmer or colder) can be made by turning the knob only one segment at a time, and at 1 hour intervals.

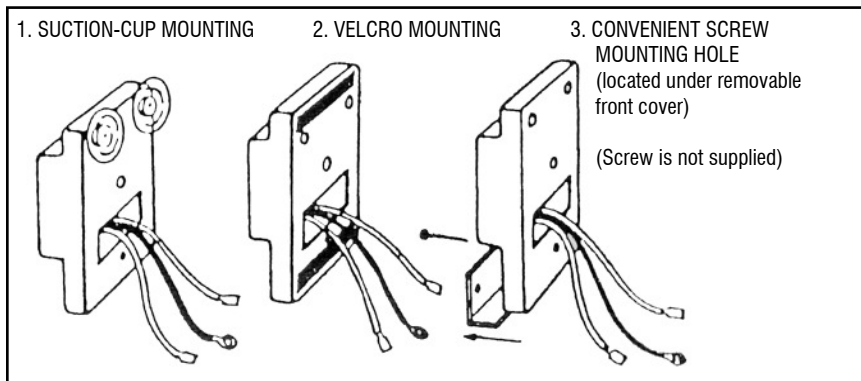

Rev. 08092011

SEALED UNIT PARTS CO., INC.

2230 Landmark Place • Allenwood, NJ 08720 USA
Phone: (732) 223-6644 • Fax (732) 223-1617
info@supco.com • www.supco.com

FREEZER CONTROL INSTRUCTIONS


The SUPCO SC1002 Temporary Cold Control will enable you to operate the freezer until you obtain a replacement thermostat.

The temperature range from numbers 1 to 9 on the dial will supply ideal temperatures for freezers.

The SC1002 has a rating of 80 amps LRA and 20 amps FLA and can be used on units up to 1/2 H.P.

INSTALLATION:

1. Disconnect all electrical power and remove defective thermostat.
2. Connect wires from defective thermostat to the SC1002 using the plastic sleeves. If the wires from the cabinet do not have male connectors, splice wires and use the wire nuts.
3. The ground wire must be connected to the metal frame of the appliance to prevent any shock hazard.
4. Set control knob to the proper temperature range. It may take more than 2 hours for the temperatures to stabilize and for the unit to cycle-off.
5. Adjustments for temperature accuracy (warmer or colder) can be made by turning the knob only one segment at a time, and at 1 hour intervals.

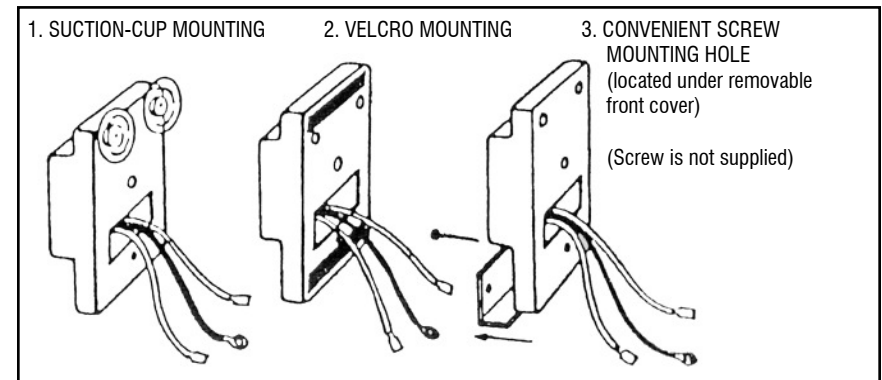

Rev. 08092011

SEALED UNIT PARTS CO., INC.

2230 Landmark Place • Allenwood, NJ 08720 USA
Phone: (732) 223-6644 • Fax (732) 223-1617
info@supco.com • www.supco.com