



Use and Care Guide

ProCard™

Dryer Vent Kit

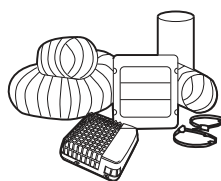

 TOOLS REQUIRED



Caulking gun



Phillips screwdriver

 


Scissors

HARDWARE REQUIRED (NOT INCLUDED)



Screws (4)




Latex caulking

Installation - IMPORTANT: Before assembly, remove the plastic strap from the cap.


1 ASSEMBLING THE ALUMINUM PIPE AND CAP

- Press the sides of the aluminum pipe together and lock them into place. Snap the guard onto the louvered cap.

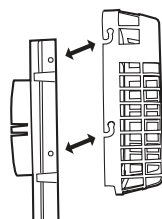

2 ATTACHING THE VENT CAP TO THE PIPE

- Attach the vent cap to the pipe. Ensure the pipe fits snugly inside the collar. Align the clips on the collar (A) so they snap into the pipe slots (B).

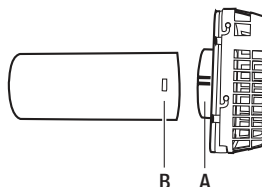

3 CUTTING A HOLE THROUGH THE WALL

- Cut a 4 1/4 in. diameter hole through the wall, or insert a window plate with a 4 1/4 in. diameter hole.


NOTICE: Ensure the appropriate tool is used to cut the hole in the wall according to the type of wall material.



4 1/4 in.
10.8 cm


4 INSTALLING THE EXHAUST HOOD

- From the outside, pass the pipe through the hole opening until the vent cap lies flush against the outside wall surface. Secure the vent cap to the wall by screwing it into place and/or caulking around the reveal.

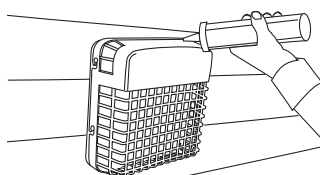


5 ATTACHING THE DRYER DUCT TO THE CLOTHES DRYER

- Slide one end of the duct over the exhaust outlet of the clothes dryer, and secure it with the clamp.

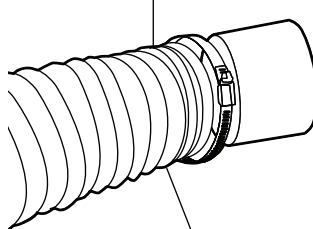

6 ATTACHING THE DRYER DUCT TO THE TAILPIECE

- With the dryer in its permanent position, extend the duct, and measure it to cover at least 2 in. of exhaust tailpiece. Cut off any excess duct, and secure this end with the adjustable clamp.

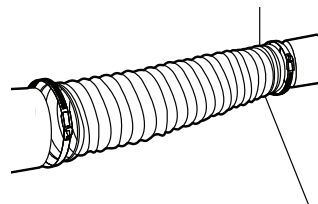

Safety Information



IMPORTANT: Vent the exhaust hood outdoors through a wall or window opening as close as possible to the dryer.

Warranty

WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit www.DundasJafine.com.