



# INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane ♦ Sparks, NV 89431-6467 ♦ (775) 359-4712 ♦ Fax (775) 359-7424  
E-mail: [haws@hawsco.com](mailto:haws@hawsco.com) ♦ website: [www.hawsco.com](http://www.hawsco.com)

No. 2080045(15)

## **Model 7501/7501T/7501TH/7501T240/7501T240H Portable Eyewash/Portable Eyewash with Heater**

**NOTE TO INSTALLER: Please leave this information with the Maintenance Department.**

### **LIMITED WARRANTY**

HAWS warrants that this specific product is guaranteed against defective material or poor workmanship for a period of **one year from date of shipment**. HAWS liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS Factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first class workmanship, provided that claim is made in writing to Haws within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS will not be liable for the cost of repairs, alterations or replacements, or for any expense connected therewith made by the owner or his agents, except upon written authority from HAWS, Sparks, Nevada. HAWS will not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that Haws has made no other warranties either expressed or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, or consequential damages claimed to arise under the contract of sale.

The emergency equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended. This product is intended to supplement first-aid treatment. Due to widely varying conditions, Haws cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

**NO OTHER WARRANTIES EXPRESSED OR IMPLIED ARE AUTHORIZED, PROVIDED OR GIVEN BY HAWS.**

**SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:**

**TECHNICAL SUPPORT: 1-800-766-5612**

**FOR CUSTOMER SERVICE: 1-888-640-4297**

**RECOMMENDED TOOLS:** Three 1/4" diameter anchors suitable for supporting filled eyewash (approximately 80 pounds), and tools needed to install these anchors.

**LOCATION OF UNIT:** The Model 7501/7501T/7501TH/7501T240/7501T240H Portable Eyewash should be installed in close proximity to potential accident areas. It should be clearly identified, free from obstructions and easily accessible. **NOTE: Personal wash unit Model 7501T/7501TH/7501T240/7501T240H shall be protected from freezing. Models 7501/7501T/7501TH/7501T240/7501T240H shall not be exposed to ambient temperatures exceeding 38°C (100°F).**

**ELECTRICAL CONNECTIONS:**

**Model 7501T** requires a 120VAC, three-prong outlet, and is supplied with a heavy-duty 8 foot power cord with GFCI plug.

**Model 7501T240** requires a 240VAC outlet and is not supplied with a power cord which must be installed by the user.

**Model 7501T240** MUST BE PROTECTED BY a Class A GROUND FAULT CIRCUIT INTERRUPTER (GFCI).

**Models 7501TH and 7501T240H** must be protected by a Class A Ground Fault Circuit Interrupter (GFCI)- No power cord is supplied – Units are suitable for installation and use in Class 1, Division 2, Group B, C, D, T6, Class 2, Division 2, Group E, F, G areas and **MUST BE INSTALLED IN COMPLIANCE WITH LOCAL, STATE AND/OR FEDERAL CODES.**

## INSTALLATION INSTRUCTIONS

**NOTES:** Instructions apply to all models unless otherwise specified.

**STEP 1:** **Model 7501:** Mount unit to wall utilizing “J” bracket (supplied). Note: ¼” mounting hardware not supplied. See Installation Drawing on Page 7 of 8.

**Model 7501T/7501T240:** Install blanket and power cord per instructions provided with blanket. Mount unit to wall utilizing “J” bracket and three aluminum spacers (supplied). Locate one aluminum spacer behind each bolt hole in “J” bracket. Note: ¼” mounting hardware is not supplied. See Installation Drawing on Page 8 of 8.

**STEP 2:** Make sure portable eyewash unit is level from front to back and left to right before securing bracket to wall. Eyewash nozzles should be between 33 inches (83.8 cm) and 53 inches (164.6 cm) above the floor when eyewash arm is in the active (lowered) position (See Installation Drawings, pages 7 and 8 of 8).

**IMPORTANT:**

**DO NOT FILL PAST WATER FILL LINE AS LEAKAGE WILL OCCUR AT THE EYEWASH HEADS.**

Filled eyewash unit is heavy (approximately 80 pounds). Wall bracket anchors (Quantity 3 - not supplied) must be strong enough to support the filled eyewash and the weight of a worker leaning on eyewash.

**STEP 3:** Fill up to fill line (see important note above). Requires 8.75 gallons (max) of water, (make sure that no debris or contaminants of any kind are present in the flushing fluid). Make sure unit is level from front to back and left to right. If installed as indicated, eyewash unit will provide 15-minute duration of flow.

**CAUTION – MAKE SURE MODEL 7501T/7501TH/7501T240/7501T240H EYEWASH UNIT IS FILLED WITH FLUSHING FLUID (UP TO FILL LINE) BEFORE CONNECTING HEATER TO POWER SOURCE.**

**STEP 4:** Model 7501T/7501TH/7501T240/7501T240H: Connect heater to power source (See Electrical Connections above).

**STEP 5:** Take proper precautions to help prevent the growth of potentially harmful bacteria in eyewash tanks. (Refer to Maintenance Instructions).

## OPERATING INSTRUCTIONS

Instruct all employees in the use of this Emergency Eyewash. Personnel should be assigned to check eyewash liquid level daily.

**STEP 1:** Lead patient to nearest eyewash station. Seconds can make the difference in preventing serious eye injury.

**STEP 2:** Pull yellow eyewash arm firmly. Eyewash arm will drop to activate eyewash.

**STEP 3:** Lower head until eyes enter eyewash stream. Use thumbs and forefingers to hold eyelids open. Flush for 15 minutes.

**STEP 4:** Seek qualified medical attention immediately.

## MAINTENANCE INSTRUCTIONS

### NOTE:

- Customer must provide an inspection tag and maintain a record of inspection dates and type of maintenance performed (i.e. adding Sterile Antimicrobial Preservative Model 9082, etc.)
- Acanthamoeba survive mild chlorination and are commonly found in tap water. Sterile Antimicrobial Preservative Model 9082 will prevent the growth of Acanthamoeba. Hot water, 158° F (70° C) or hotter will destroy Acanthamoeba but must be allowed to cool prior to use in eyewash units.

**STEP 1:** Self contained eyewash equipment shall be visually checked to determine if flushing fluid needs to be changed or supplemented. See STEP 3 for additional information regarding activated units.

**Frequency of inspection:** Depending on environmental conditions, visual inspections should be performed on either a daily, weekly or monthly basis as some water loss will occur due to natural evaporation process.

**STEP 2:** Take proper precautions to help prevent the growth of potentially harmful bacteria in eyewash tanks. We recommend **either** of the following procedures:

**A.** Procedure 1: Use suitable Sterile Antimicrobial Preservative Model 9082 to help prevent the growth of bacteria in eyewash tank. Eyewash tank should be drained, flushed and refilled with clean potable water and Sterile Antimicrobial Preservative Model 9082 as directed by the preservative's manufacturer.

**NOTE:** Disconnect Model 7501T/7501TH/7501T240/7501T240H from power source before performing maintenance.

**B.** Procedure 2: Drain, flush and refill portable units with clean potable water at least once every week. Thoroughly cleanse tank at least once every month.

**STEP 3:** After activating units for whatever reason, ensure the following steps are implemented:



- A.** Refill tank with potable water to the watermark line.
- B.** If water is discharged for any reason – follow Procedure 1 or Procedure 2 of Step 2 above to ensure that water quality is maintained.

## TROUBLESHOOTING

PROBLEM	REPAIR CHECKLIST
1. No flow.	1. a. Tank empty. Refill tank (8.75 gallons). b. Obstruction in line or fitting. Clear obstruction.
2. Poor flow from eyewash head(s).	2. a. Tighten head assembly. b. Check for obstructions. If necessary, remove eyewash head(s), clean and reassemble. To reassemble head, place cap screw through head and thread into head anchor two or three turns. Tilt head assembly and work anchor legs into eyewash armholes. Tighten assembly. Check for leaks.
3. Water leak between joints or fittings.	3. a. Pull hose off fitting. Smooth raised plastic edge on center of fitting. Return hose and hose clamp to original position. b. Tighten hose clamp(s) with pliers.
4. Water leaking from eyewash heads.	4. a. Check to see if water level has exceeded water fill line (indicated on side of unit). If so, remove excess water till fill line is reached. b. Make sure unit is level from front to back and left to right.
5. Eyewash flows for less than 15 minutes.	5. a. Fill water level in eyewash tank even with water fill line (indicated on side of unit).
6. Excessive water loss	6. a. Check unit for leaks. Some loss due to evaporation is normal.
7. Heater doesn't turn on. (Model 7501T/7501TH/7501T240/7501T240H)	7. a.1 <b>7501T/7501T240</b> : Not plugged in or no power to outlet. a.2 <b>7501TH/7501T240H</b> : No power to unit. b. Check GFCI and/or circuit breaker.  c. If ambient temperature is high and doesn't allow the water temperature to drop below 68°F (20°C) the heater may not switch on. <b>Heater settings are:</b> Non-adjustable thermostat preset to switch at 73°F ± 5°F (23° ± 3°C). Test the thermostat and heater function by applying ice in a circular motion to thermostat location. Apply ice to this location for approximately 3-5 minutes. The heat trace cable should become warm to the touch when operating properly. Thermostat locations are indicated on Installation Drawing page 8 of 8.

ITEM	DESCRIPTION	PART NO.
1	EYEWASH HEAD ASSY	SP19
2	BRACKET	0001217418
3	CAP	SP131
4	LABEL, CAP, REFILL	0003163925
5	STERILE ANTIMICROBIAL PRESERVATIVE	9082
6	ALUMINUM SPACER	0310000166
7	BLANKET	*SEE TABLE

# PARTS BREAKDOWN

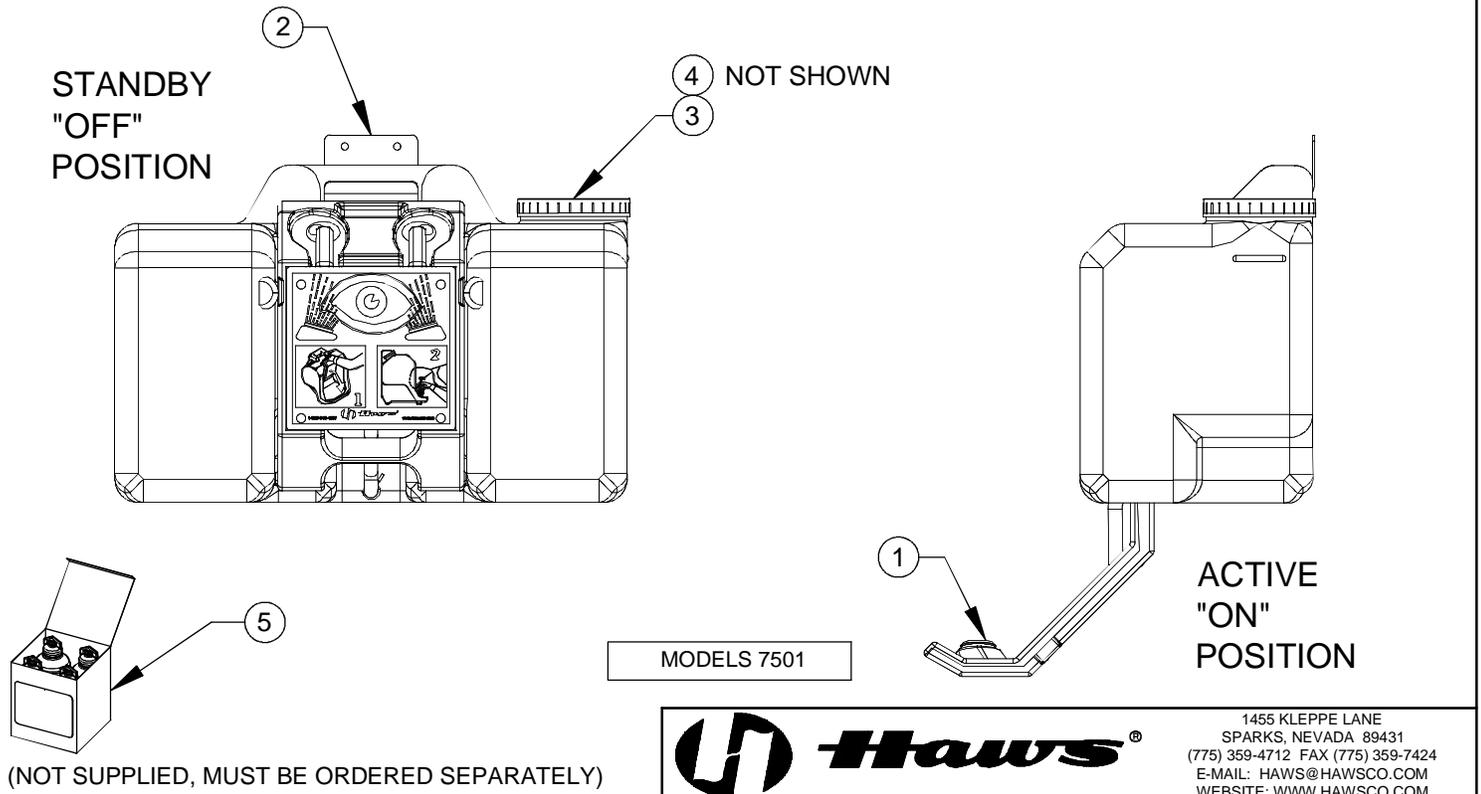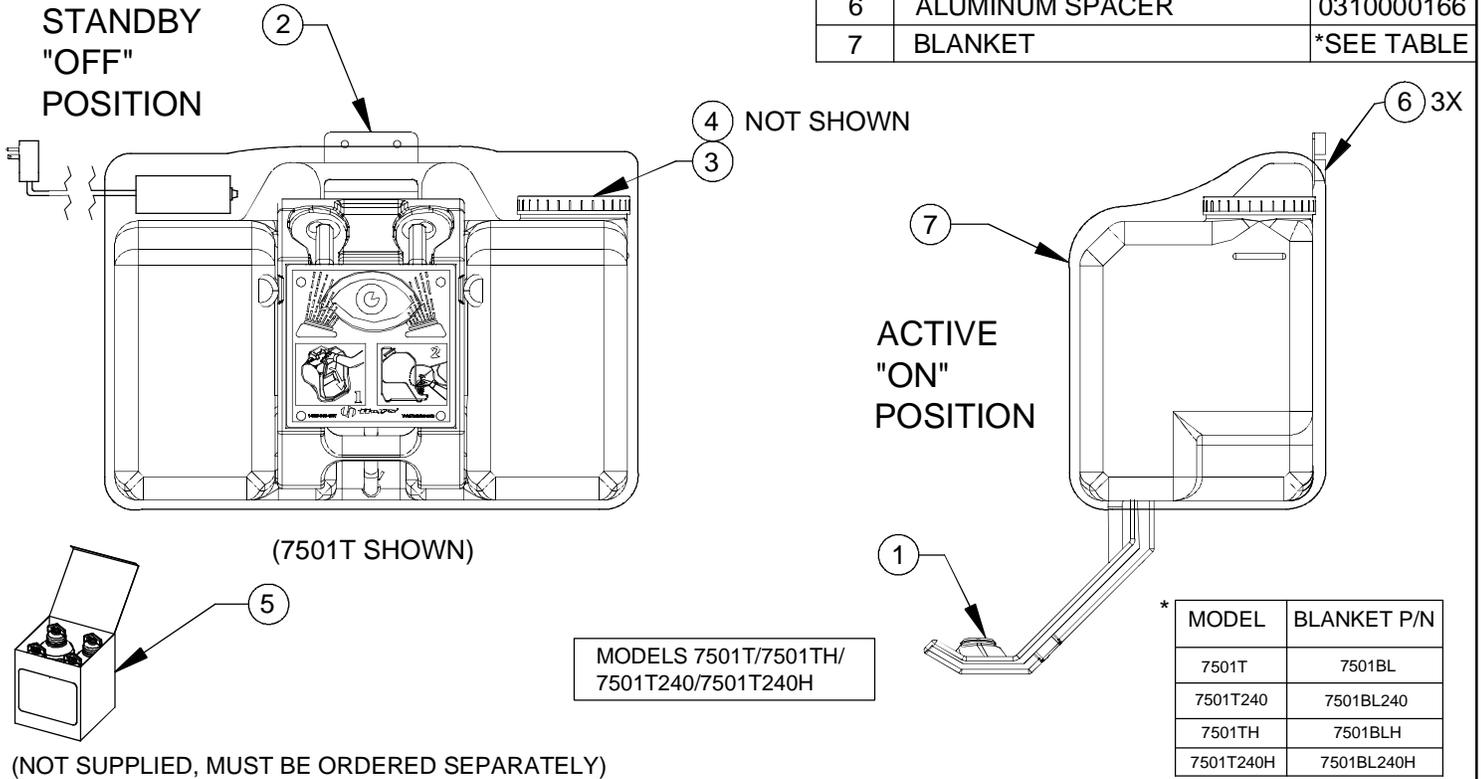


WHEN ORDERING PARTS PLEASE SPECIFY MODEL NUMBER.



**Haws**<sup>®</sup>

1455 KLEPPE LANE  
SPARKS, NEVADA 89431  
(775) 359-4712 FAX (775) 359-7424  
E-MAIL: HAWS@HAWS.CO.COM  
WEBSITE: WWW.HAWS.CO.COM

ECN NO. 5086	REVISED PER ECN: 5139	BY CC	MODEL(S) 7501/7501T/7501TH/7501T240/7501T240H	PART NUMBER 0002080045
DRAWN RTM	DATE 04/18/04	CHKD VWC	PORTABLE EYEWASH	REVISION 15
APPROVED FV	DATE 09/21/16	SCALE: 1:1	DRAWING TYPE: PARTS BREAKDOWN	SIZE: A SHEET 1 OF 1

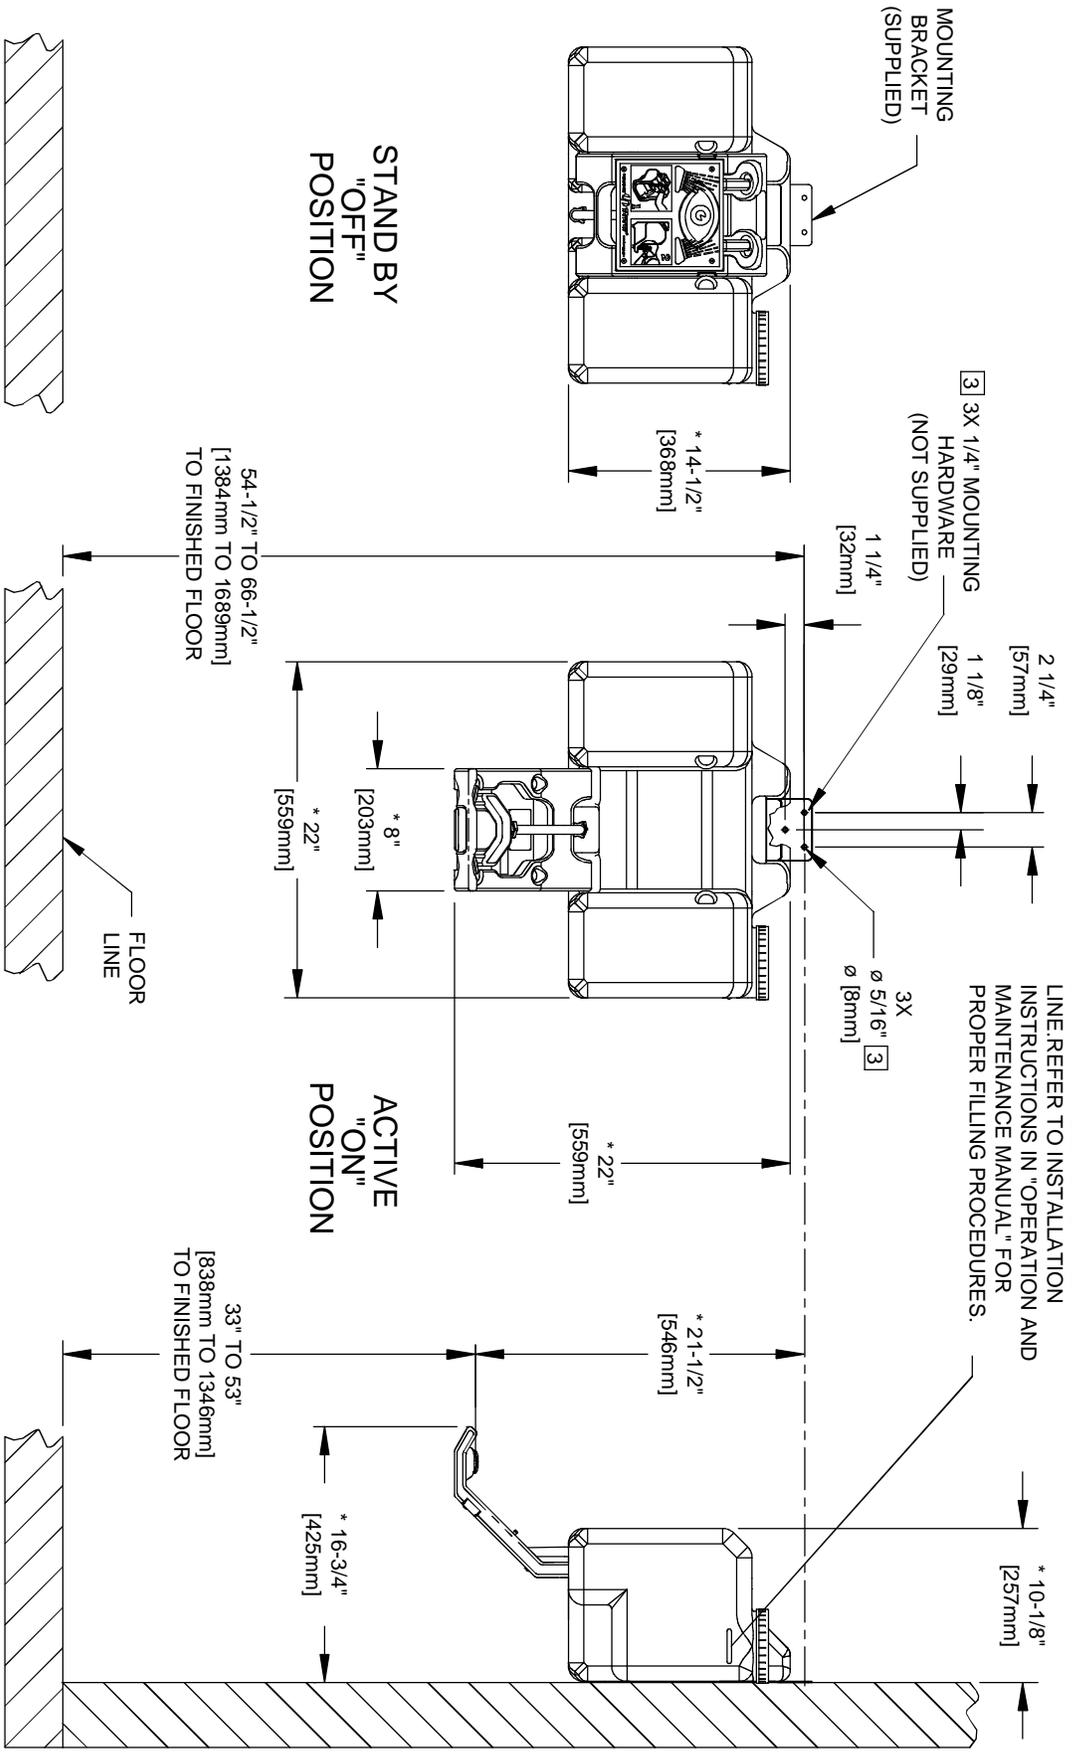

DO NOT EXCEED WATER FILL LINE. REFER TO INSTALLATION INSTRUCTIONS IN "OPERATION AND MAINTENANCE MANUAL" FOR PROPER FILLING PROCEDURES.

NOTES:

1. TO COMPLY WITH ANSI Z358.1-2014 FOR EMERGENCY EYEWASH OR EYE/FACE WASH AND SHOWER EQUIPMENT:
  - UNIT SHALL BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS AND ACCEPTABLE PLUMBING PRACTICES.
  - EYEWASH OR EYE/FACE WASH SHALL BE POSITIONED WITH NOZZLES NOT LESS THEN 83.8 CM (33 IN.) AND NO GREATER THAN 134.6 CM (53 IN.) FROM SURFACE ON WHICH USER STANDS AND 15.3 CM (6 IN.) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
2. UNIT MUST BE LEVEL FROM FRONT TO BACK AND SIDE TO SIDE.
3. ALL THREE MOUNTING HOLES ON MOUNTING-BRACKET MUST BE USED TO PROPERLY SECURE EYEWASH UNIT TO WALL.

(NOTES CONTINUED ON SHEET 2 OF 2)

**MOUNTING DETAIL FOR:**  
**MODEL 7501 (SHOWN)**  
**MODELS 7501T/7501TH/7501T240/7501T240H - WITH HEATED BLANKET**  
**(SEE SHEET 2 OF 2)**



1455 KLEPPE LANE  
 SPARKS, NEVADA 89431  
 (775) 359-4712 FAX (775) 359-7424  
 E-MAIL: HAWS@HAWS.CO.COM  
 WEBSITE: WWW.HAWS.CO.COM

EQ. NO.	REVISED PER:	BY:	MODEL(S)	PART NUMBER
5086	EQ. 5139	G.C.	7501/7501T/7501TH/7501T240/7501T240H	0002080045.D
DRAWN:	DATE:	CHKD:	SCALE:	REVISION
1/18/16	1/18/16	VMO	11"	15
APPROVED:	DATE:	SCALE:	DRAWING TYPE:	SIZE
FV	09/21/16	11"	INSTALLATION	A   SHEET 1 OF 2

