


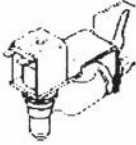



Instruction Sheet

16010894

Description: Icemaker, Water and Filter Valves Replacement Instructions.

Repair Part Number: 12001892, 61005273, 61005626, 61005627

Kit includes:

				
12001892 12002031 OR	61005273 61005591 OR	61005626 6100599 OR	61005627 61005998	16010894 Instruction Sheet



WARNING

To avoid risk of electrical shock, personal injury or death, disconnect electrical power before servicing.

This instruction sheet covers both non-water filter and water filter models.

Procedure:

1. Disconnect the unit from the power source.
2. Remove the machine compartment cover.
3. Disconnect the wiring and the water line hook up on the defective valve assembly.
4. Install the new valve assemblies as shown in figure 1 for the water filter valves and figure 2 for icemaker and the water fountain valves.

Water Filter Model

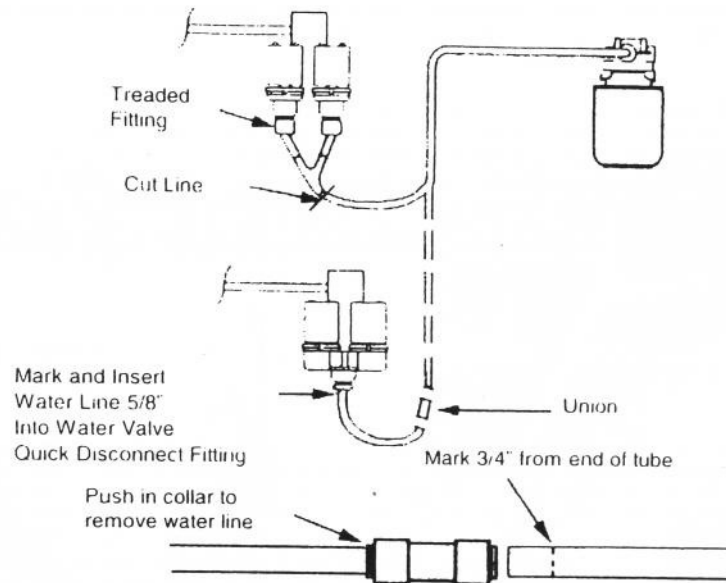


Figure 1

Note: When removing and reinserting water lines from quick disconnect connector always cut 1" off the water line before reinserting into the connector.

Non-Water Filter Model

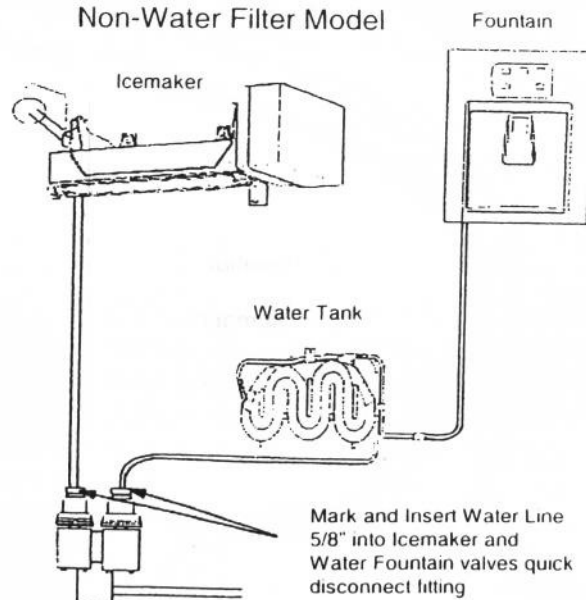


Figure 2

Note: When removing and reinserting water lines from quick disconnect connector always cut 1" off the water line before reinserting into the connector.