

Instruction Sheet

for Detergent Lid Replacement

1. With detergent lid open, pry the open edge of the detergent lid upward using two fingers as shown. Use even pressure to remove left and right sides at once. (Lifting only the left or right sides alone too far could damage the guide track.) See *Figure 1*.

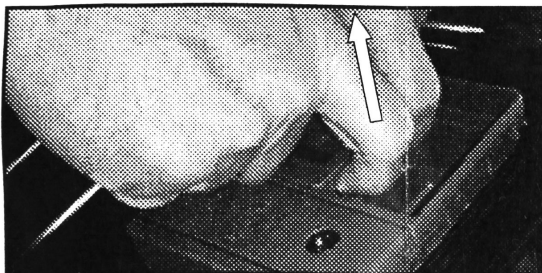


FIGURE 1

2. With the front (or bottom) edge now removed from the track, pry the top side of the lid away from the body using two fingers as shown. As in step 1, use even pressure to remove left and right sides at once. A small amount of variation is permissible. See *Figure 2*.

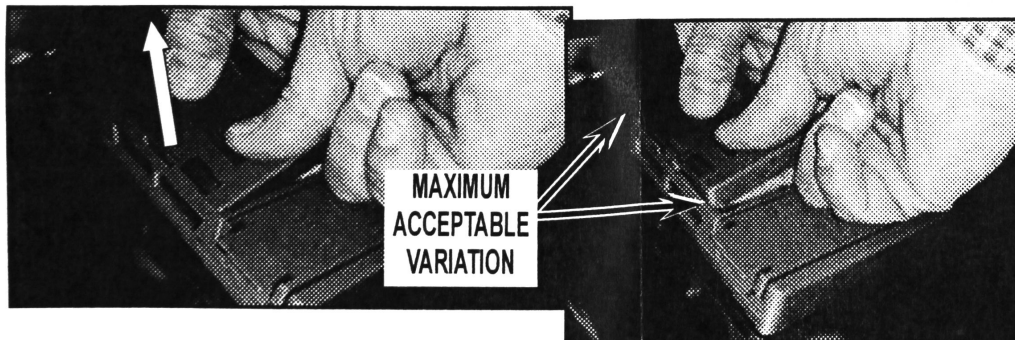


FIGURE 2

Kit Contains:

- 1 Detergent Lid
- 1 Instruction Sheet

3. Inspect new lid to make sure that the short leg of the spring is fully inserted into the back of the detergent lid.
4. Insert the long leg of the spring into the pocket in the dispenser assembly and snap the new lid into place. See *Figure 3*.

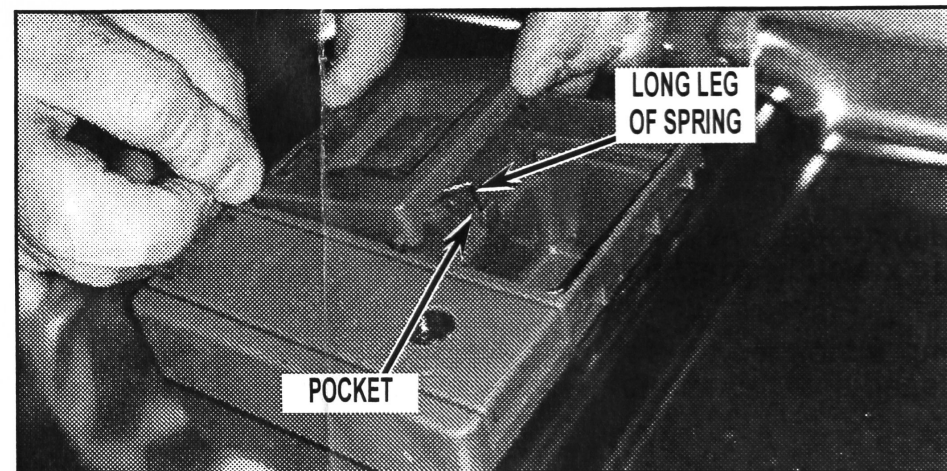


FIGURE 3

5. Close the lid until it latches and release with the “open” button to make sure the spring is working properly.