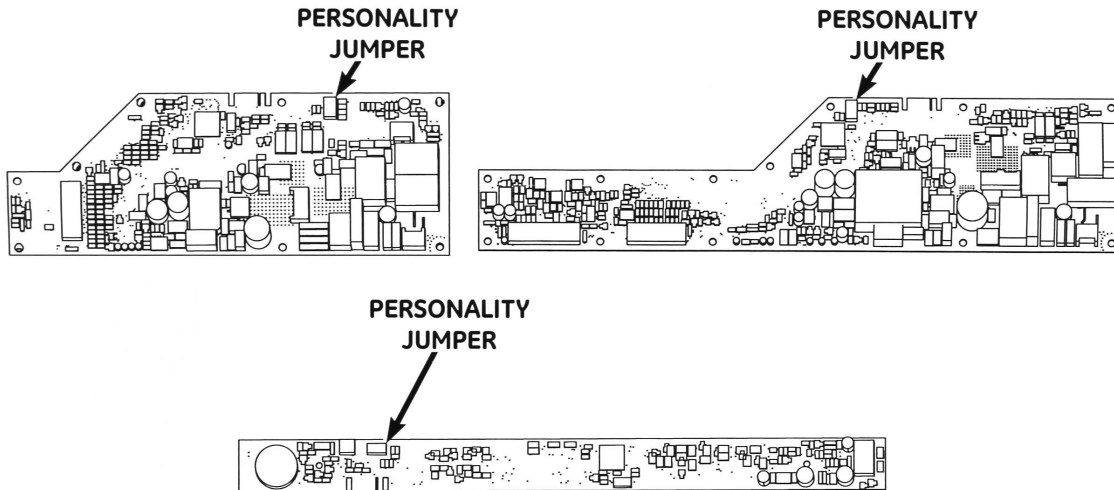


⚠ ATTENTION

Configure personality jumpers BEFORE installing replacement control into unit

Directions for control board replacement:

- 1.) Use the tables located in this document to identify the jumper configuration for the replacement control board.



- 2.) BEFORE installing, verify that the personality jumper setting on the new replacement board matches the configuration selected in Step 1. If it does not, reconfigure accordingly.

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.

- 3.) Remove protective film on the LCD screen (some models).
- 4.) Install replacement control into dishwasher.
- 5.) Validate board functionality.
- 6.) Insert this document next to the mini-manual for reference.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Select the Model Number which best fits the unit you are servicing.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
MODEL NUMBER	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
GDF510	NOT PRESENT	15 PERSONALITY 8 4 2 1
GDF520 GDF540 GDF570F	15 PERSONALITY 8 4 2 1	1 PERSONALITY 8 4 2 1
GDF570J	15 PERSONALITY 8 4 2 1	10 PERSONALITY 8 4 2 1
GDT530 ADT521PGF	13 PERSONALITY 8 4 2 1	1 PERSONALITY 8 4 2 1

ATTENTION

Configure personality header BEFORE
installing replacement control into unit

Select the Model Number which best fits the unit you are servicing.

MODEL NUMBER	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
GDT535	9 - 	1 - 
ADT521PGJ DDT575 GDT545 GDT550 GDT580 GDT590	14 - 	1 - 
DDT595	14 - 	10 - 
GDF610 GDF620	10 - 	1 - 
GDF650	10 - 	10 - 
GDT625 GDT635 GDT680	11 - 	1 - 
GDT655 GDT695	11 - 	10 - 
GDT720 PDT720	12 - 	0 - 
PDF820	1 - 	11 - 
PDT825	2 - 	11 - 

MODEL NUMBER	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
CDT725	15 - 	0 - 
CDT765	14 - 	3 - 
CDT835	2 - 	11 - 
CDT865	1 - 	9 - 
GDT740 PDT750	9 - 	3 - 
PDT760	10 - 	3 - 
PDT845	11 - 	9 - 
PDT855	12 - 	9 - 
ZDT800	13 - 	3 - 
ZDT870	14 - 	3 - 
ZDT915	2 - 	9 - 
ZDT975	1 - 	9 - 

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.