

Instruction Sheet

for Tub Seal Grease Application and Assembly to Drive Housing

1. Apply grease onto seal lips and fill grease cavity between lips. See *Figure 1*.

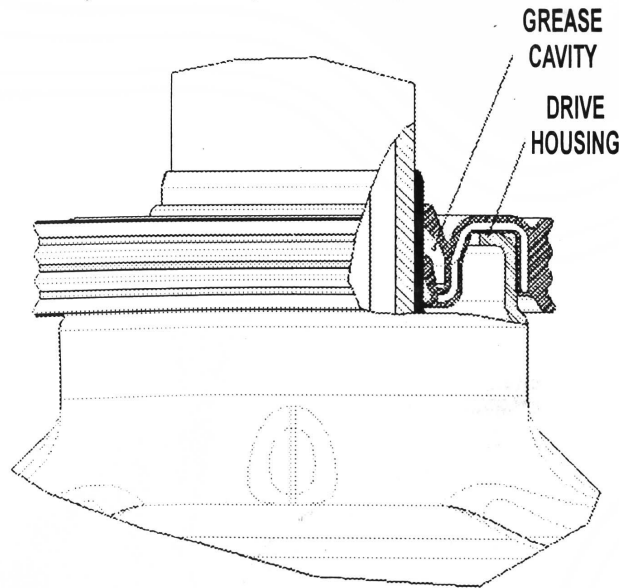


FIGURE 1

2. Attach seal to drive housing as shown. Make sure it is fully seated.
3. Attach drive assembly to tub.

NOTE: It is recommended to replace the drive block assembly when the basket is removed for service. For models with impeller order service kit W10324651, for models with agitator order 389140 drive block and 21366 spanner nut.