
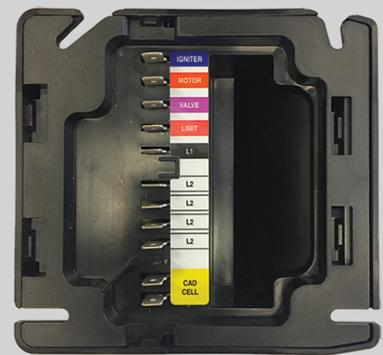
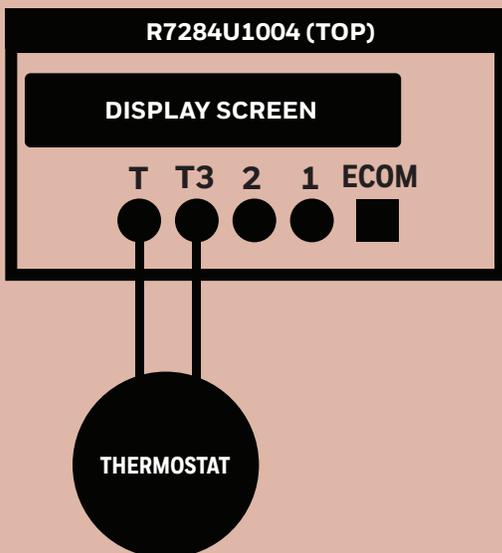


REPLACING R8184G4009 WITH R7284U WIRING

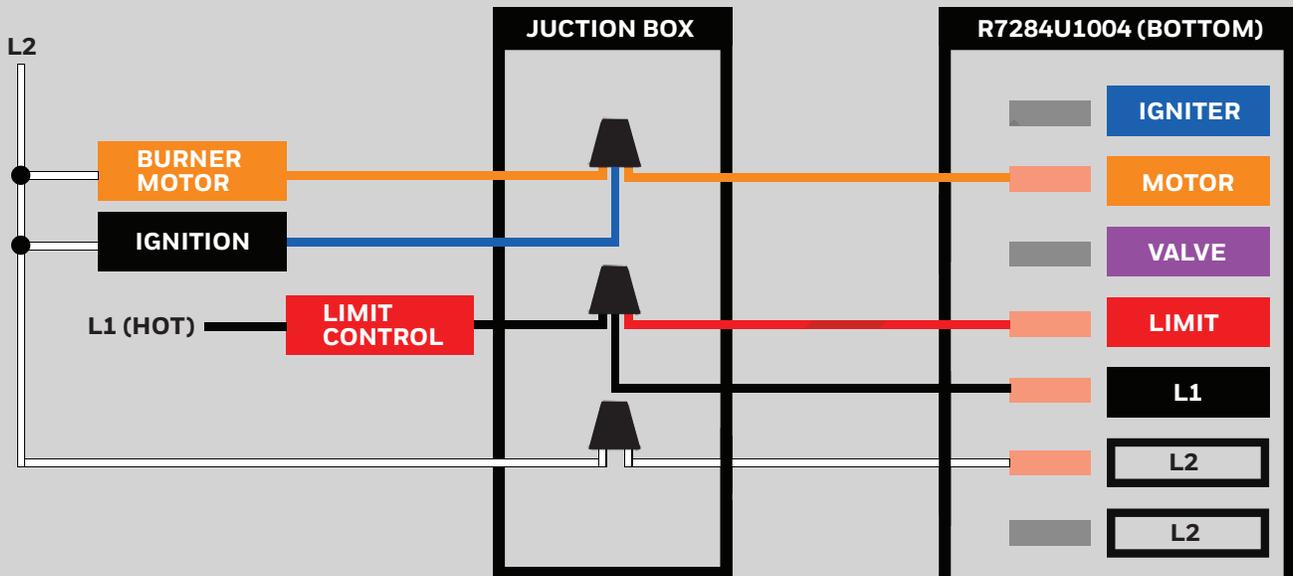

NOTES:

R7284U1004 Installer Setup

Installer setup is entered by pushing all three buttons simultaneously for 2 seconds.

<pre> INSTALLER SETUP QUIT [CONT.] </pre>	<p>If QUIT is selected, an “i” button press displays the Re-baseline option.</p> <p>If CONT is selected, an “i” button press goes to “Installer Setup”.</p>
--	---

M32092

<pre> LANGUAGE [ENG] FR ESP </pre>	<p>Select between English, French, or Spanish by using the up or down buttons and the “i” button to select.</p>
--	---

<pre> VALVE ON DELAY 0:15 </pre>	<p>Adjustment of the Valve On Delay in five second increments.</p>
--	--

<pre> IGNITION TIME 0:15 </pre>	<p>Ignition (lockout) Time adjustment.</p>
---	--

M32093

NOTE: The Ignition Time is only available for adjustment during the first 100 cycles of operation. After 100 cycles the ignition time is locked in and can no longer be adjusted.

<pre> BURNER OFF DELAY 2:00 </pre>	<p>Adjustment of the Burner Off Delay. Burner Off Delay can be adjusted in 15 second increments from 0 to 8 minutes.</p>
--	--

<pre> TT CONFIGURED ON [NO] YES </pre>	<p>Configuration of the TT terminals vs. an “internal jumper.” This option allows you to jumper the TT terminals electronically so no physical jumper is needed.</p>
--	--

<pre> SPARK IN ON DLY [NO] YES </pre>	<p>Controls sparking during On Delay period.</p>
---	--

<pre> SPARK DURING RUN [NO] YES </pre>	<p>Controls sparking during Run mode. (Interrupted versus intermittent ignition.)</p>
--	---

<pre> ALLOWED RESETS 0 1 [3] NOLIM </pre>	<p>Number of resets allowed before Restricted Lockout.</p>
---	--

<pre> APPLIANCE TYPE [BLR] FURN WH </pre>	<p>Appliance configuration (boiler, furnace, water heater) for EnviraCOM™.</p>
---	--

<pre> SHOW DIAGNOSTICS [NO] YES </pre>	<p>Enable advanced diagnostics mode and error history. Selecting NO allows access to error history and diagnostics only by entering Installer Setup.</p>
--	--

<pre> INSTALLER SETUP [QUIT] CONT. </pre>	<p>Exit installer setup.</p>
---	------------------------------

<pre> RE-BASELINE? [NO] YES </pre>	<p>If “QUIT” is selected, the user is prompted with a screen asking if it is desired to re-baseline the control.</p>
--	--

M32101