
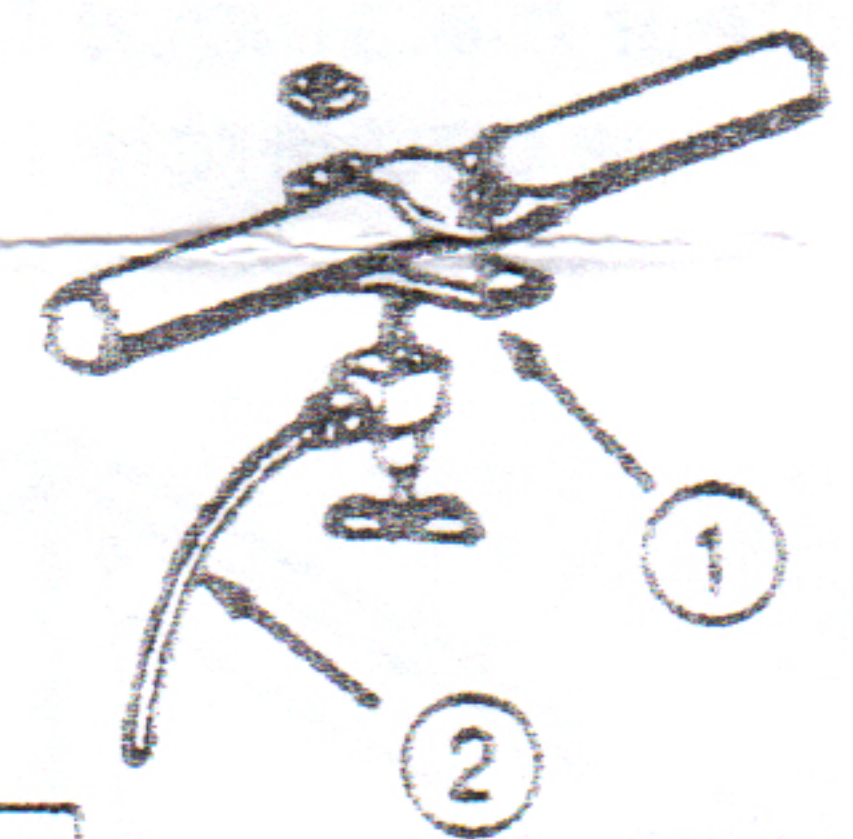
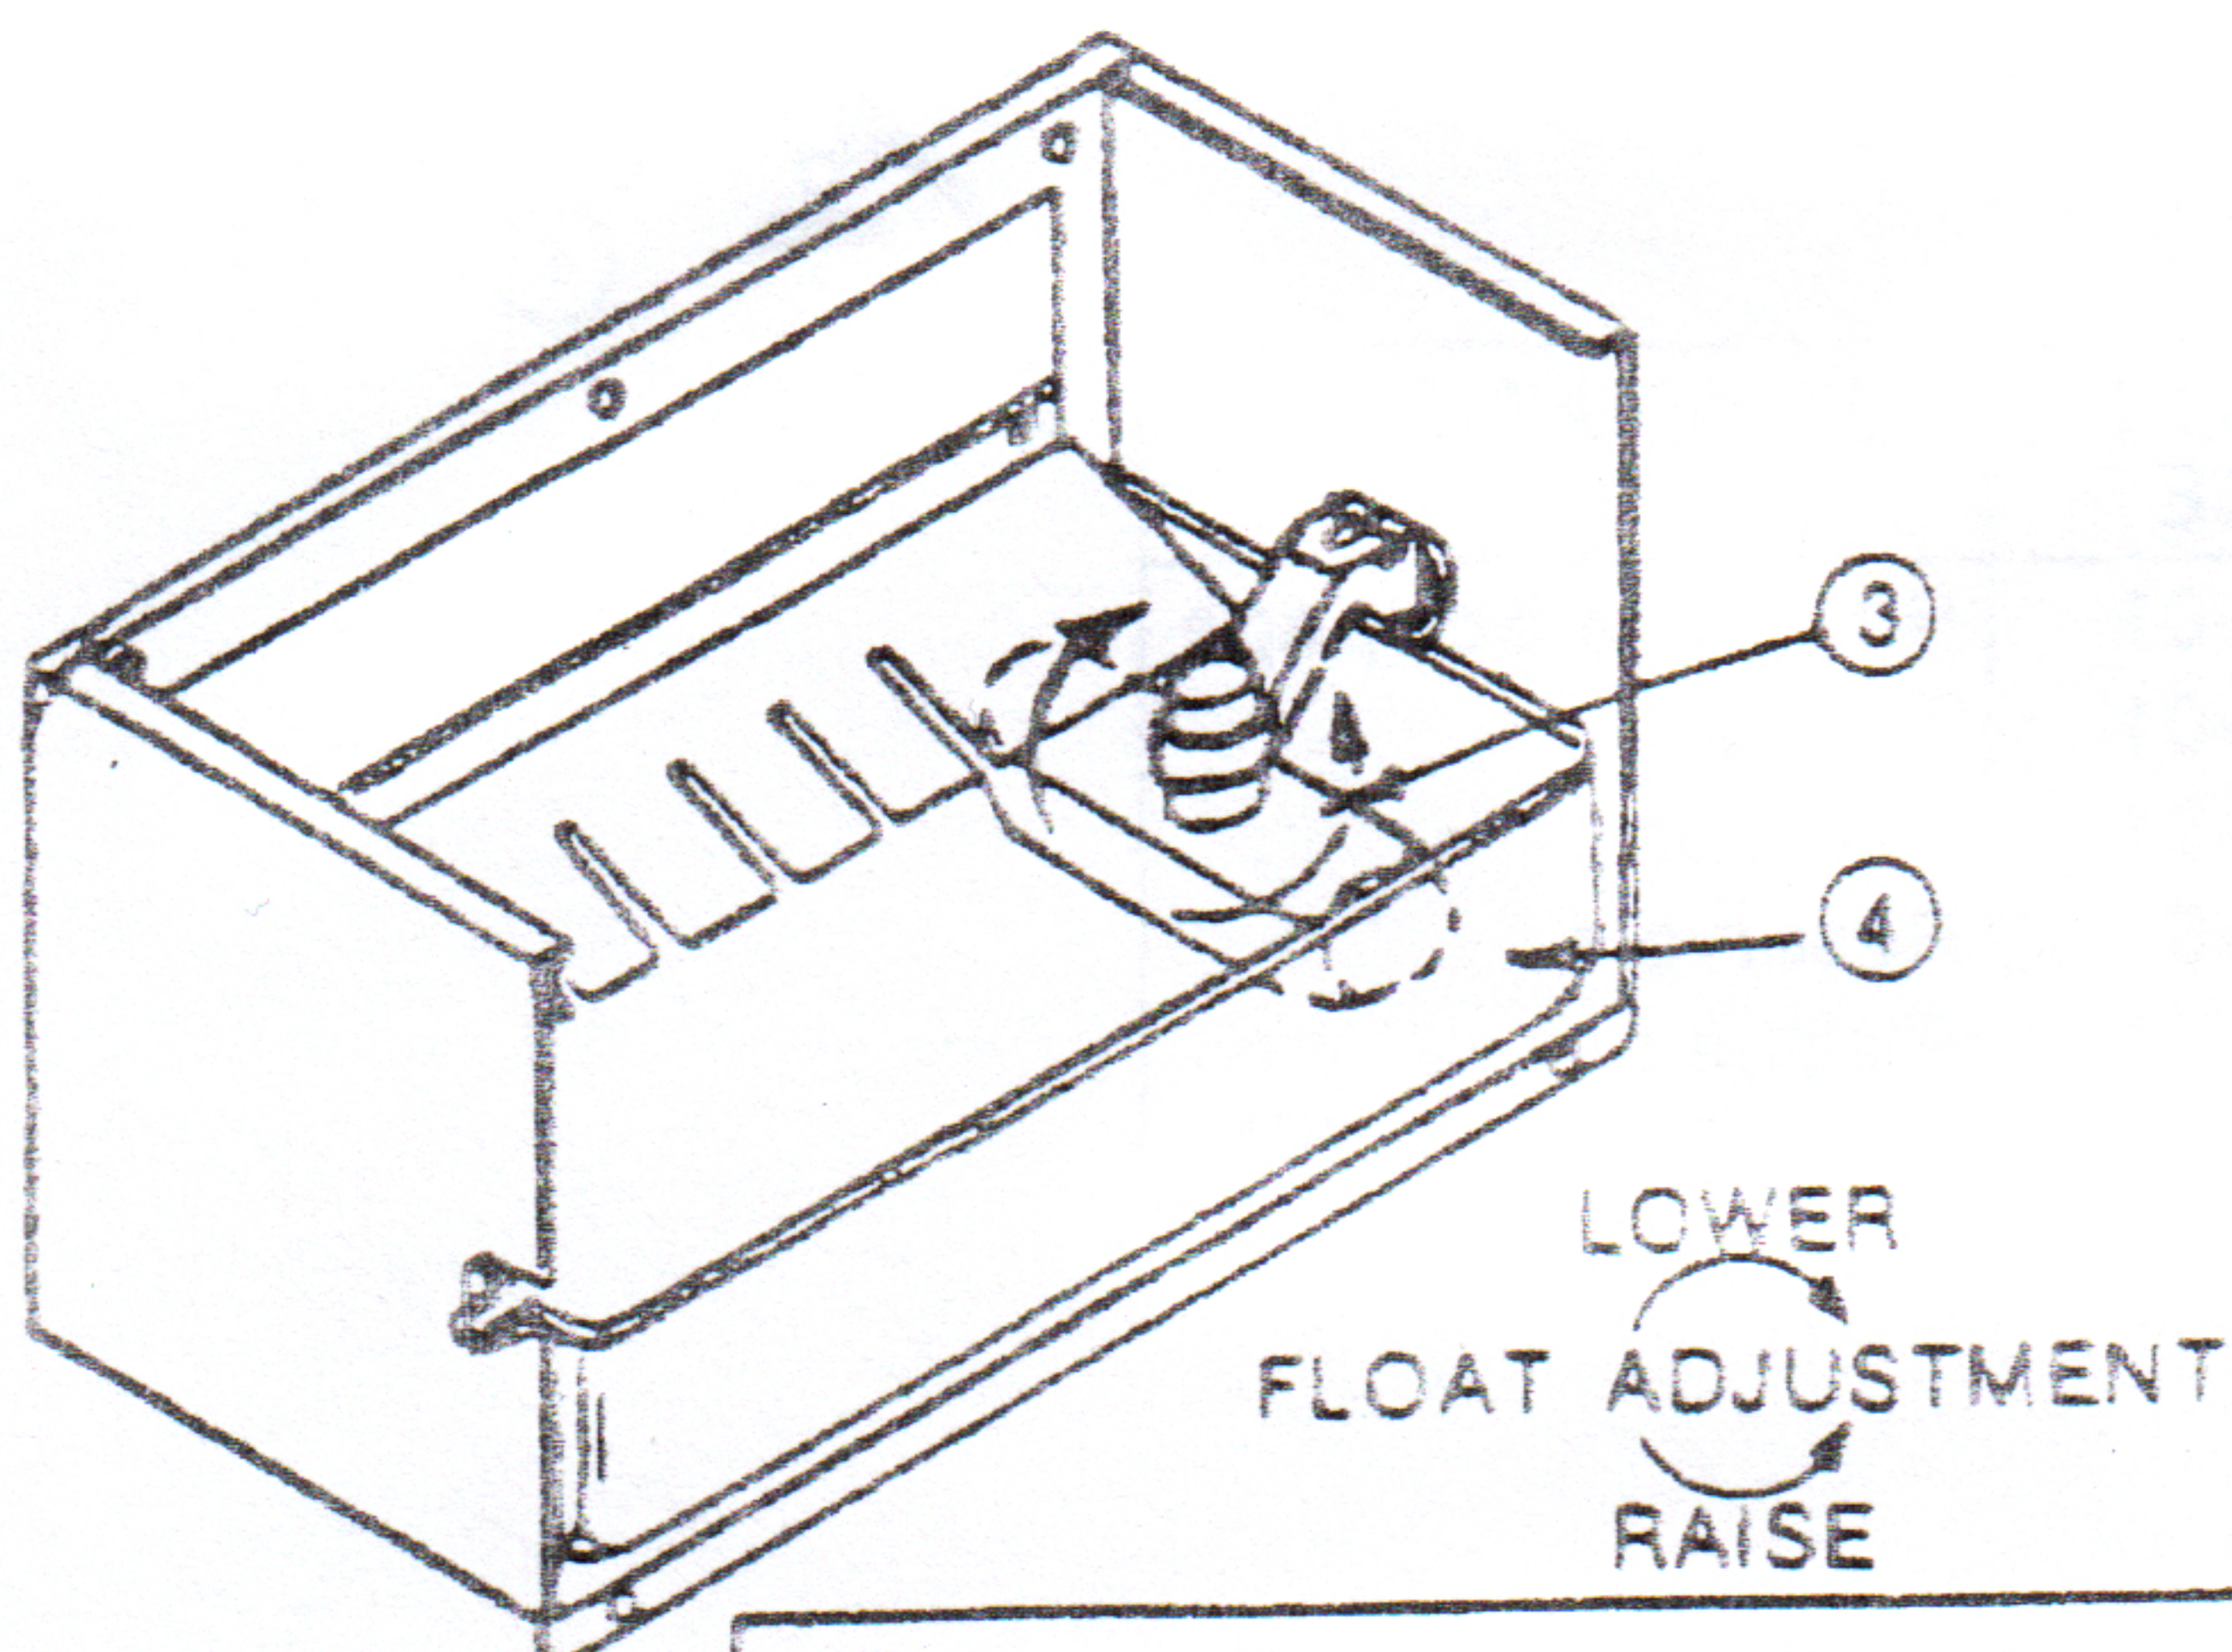


L-40 HUMIDIFIER

INSTALLATION INSTRUCTIONS

1. Unpack humidifier from carton. Take off cover and remove loose parts inside.
2. Select a suitable location on hot air plenum. Attach template provided to the plenum. Cut and drill holes as indicated.
3. Attach air deflector to back of humidifier with 2 screws as shown. When installing humidifier on counter flow type furnace, install air deflector to slope upwards - opposite to shown.
4. Attach humidifier to plenum with 6 screws provided.
5. Place reservoir into humidifier.
6. Attach float arm to valve.
7. Select cold water pipe nearest humidifier and shut off water supply. Drill a 1/4" diameter hole with a hand drill or properly grounded electric drill. Place rubber washer over small stem of saddle valve and insert into hole in pipe. Clamp securely using Saddle Strap and machine screws provided.
8. Place brass eyelet into each end of tubing. Attach tubing to saddle valve using brass compression sleeve and nut. Attach tubing to humidifier float valve using nylon compression nut.
9. Turn on water and allow reservoir to fill to 1/4" below overflow spout. If necessary, turn float to raise or lower water level. Be sure float does not touch metal baffle (bend baffle slightly if necessary). Check for leaks and replace front cover.

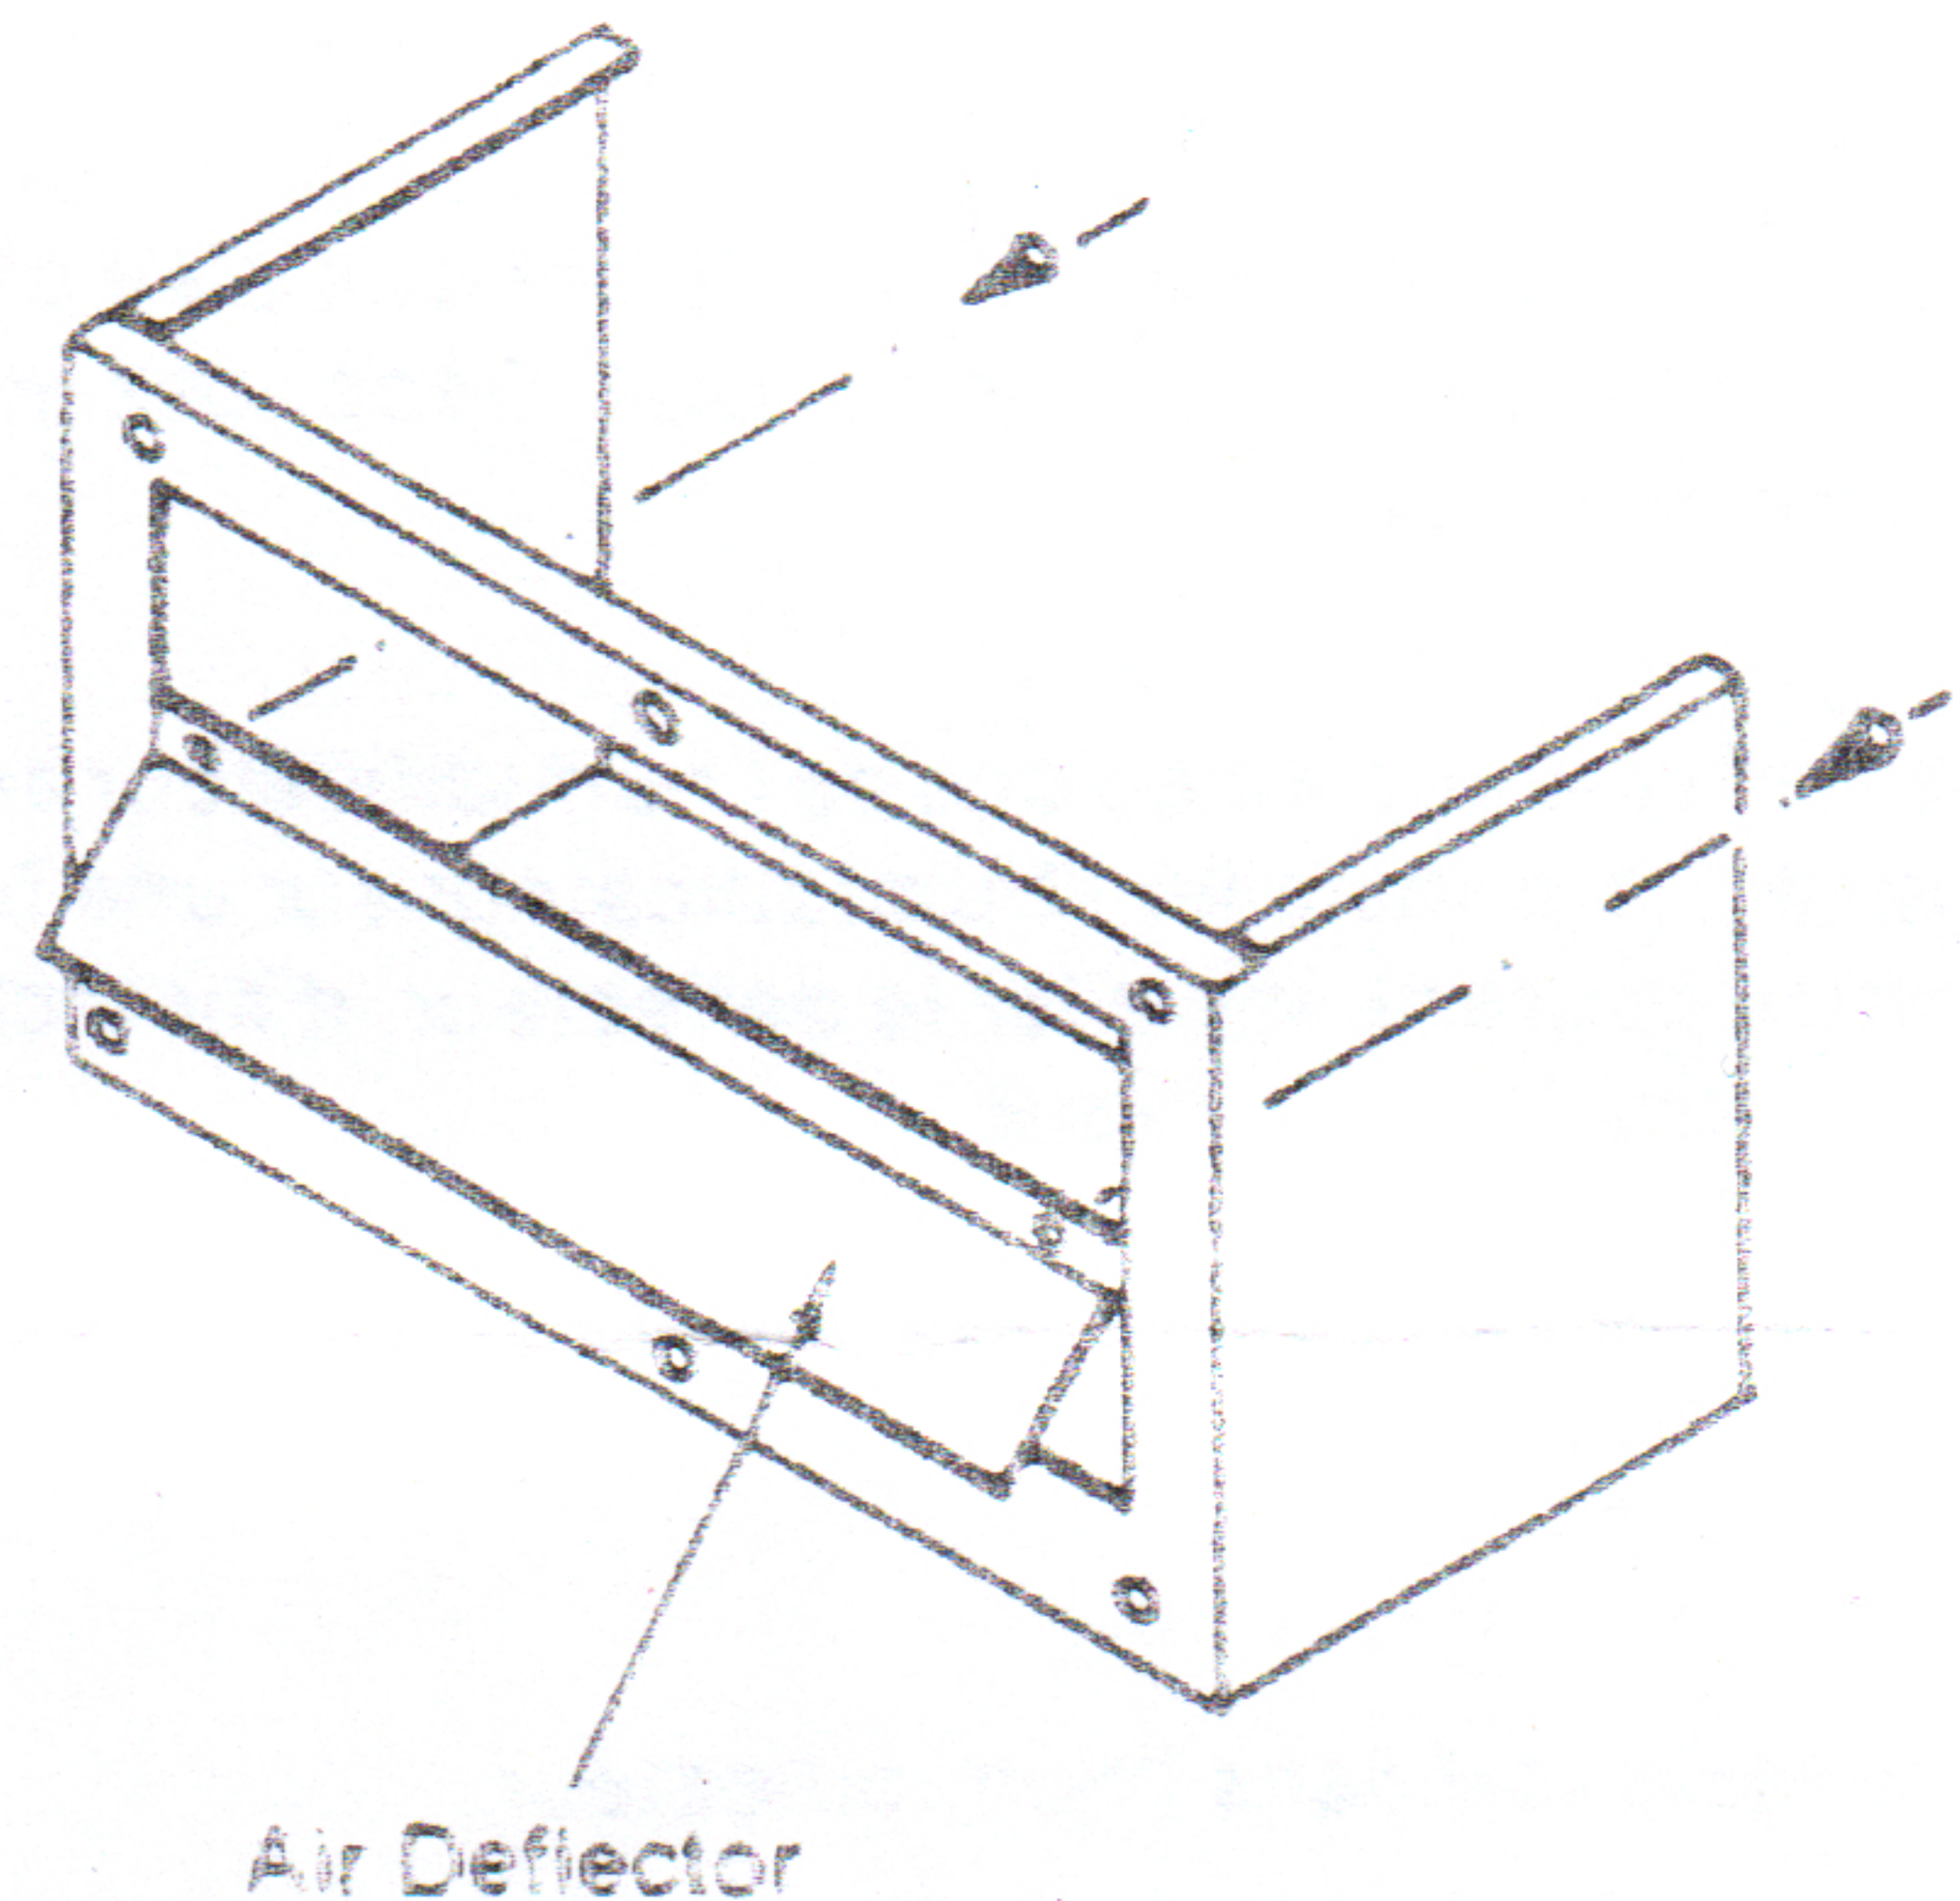

KEY#	PART#	DESCRIPTION
1	404044-01	Saddle Valve
2	404435-01	Tubing
3	404606-01	Float
4	404399-01	Reservoir
.	404073-02	Humidifier Plate

GUARANTEE

This humidifier when properly installed is guaranteed against defects in workmanship or materials for a period of one year from date of purchase. Any defective part will be repaired without charge except for transportation, provided inspection reveals no evidence of misuse.