




Scenario: If you have one (1) SPKN110RGBL or SPK110RGBL product in your home.

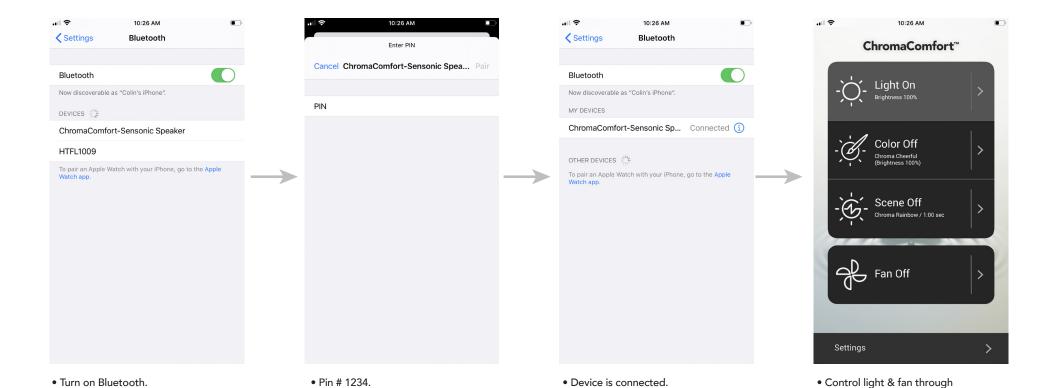

Models: SPKN110RGBL and SPK110RGBL

Note: Pin is same for both models.



• Select "ChromaComfort-

Sensonic Speaker" Option.




ChromaComfort™ App, or play music

through favorite music app





Scenario: If you have two (2) SPKN110RGBL or SPK110RGBL products in your home.

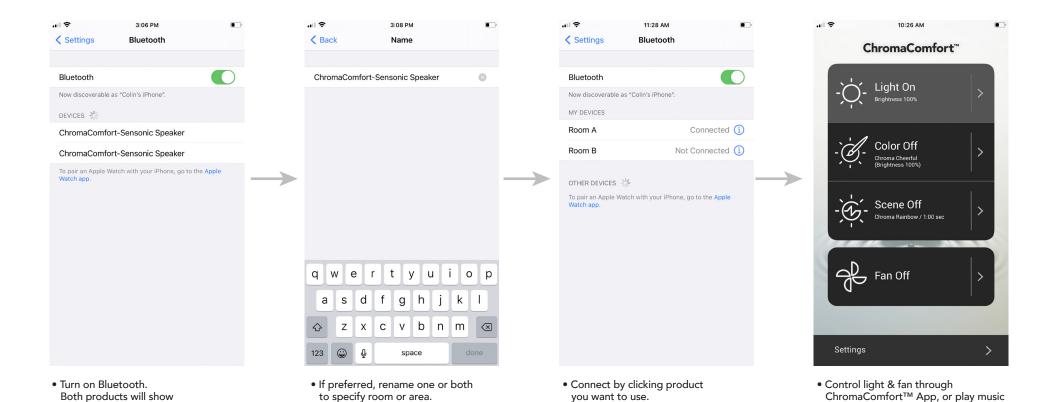

Models: SPKN110RGBL and SPK110RGBL




up with same name.



through favorite music app



Scenario: If you have one (1) AERN110RGBL or AER110RGBL product in your home.

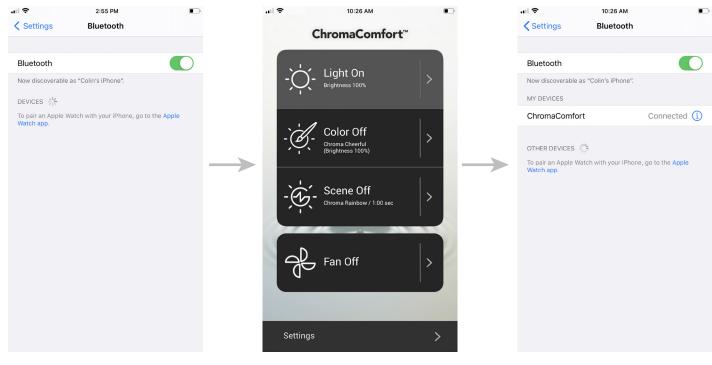

• Turn on Bluetooth. Device will not appear in list of available devices.

• Launch ChromaComfort app & product will connect automatically.

 After connected, device will appear in list of paired Bluetooth devices.

Models: AERN110RGBL and AER110RGBL







Scenario: If you have two (2) AERN110RGBL or AER110RGBL products in your home.





 Turn on Bluetooth. Download ChromaComfort™ App and it will auto-connect.

Models: AERN110RGBL and AER110RGBL










Scenario: If you have one (1) SPKN110RGBL or SPK110RGBL AND one (1) AERN110RGBL or AER110RGBL products in your home.

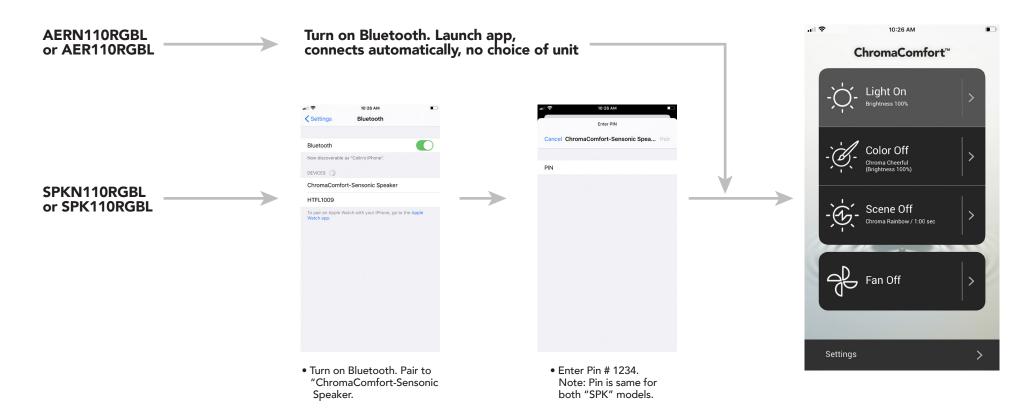

Models: SPKN110RGBL, SPK110RGBL, AERN110RGBL & AER110RGBL



