

## A19 Series Temperature Controls -- Single-Pole, Single-Throw and Single-Pole, Double-Throw Models with NEMA 1 Enclosure

### Application

These controls are designed to cover a broad range of general purpose operating temperature control applications in the refrigeration, air conditioning and heating field with a minimum number of models. Typical applications are: frozen food cases, display cases, beverage coolers, milk coolers, etc. Various control ranges are available.

Controls are supplied with an adjustable range (except models with factory sealed settings) and adjustable or nonadjustable differential.

**All Series A19 temperature controls are designed for use only as operating controls. Where an operating control failure would result in personal injury and/or loss of property, it is the responsibility of the installer to add devices (safety, limit controls) or systems (alarm, supervisory systems) that protect against, or warn of, control failure.**

### Installation

Follow equipment manufacturer's instructions if provided. If instructions are not provided proceed as follows:

### Mounting

Controls are normally mounted to a surface through holes in back of case.

**CAUTION:** On rough mounting surfaces use the top two mounting holes only. When these controls are mounted on an uneven surface using screws in all four holes, the case can be twisted enough to affect the control's calibration and operation.

For closed tank applications without well assembly Part No. FTG13A-600R packing nut assembly may be supplied. See Fig. 2 for sequence of installation. Put parts over support tube section of element, placing bulb into tank. Tighten 1/2 in. NPT adapter. Screw packing nut into adapter with the retaining washers and packing in place as shown.

To install models supplied with bulb well, first install bulb well into tank. Remove bushing from bulb well and slide bushing over capillary. Replace bushing into bulb well. Push bulb into position in bottom of well. Tighten set screw in end of adapter to hold bulb in position. See Fig. 3 for bulb well illustration.

**CAUTION:** Do not dent or deform the sensitive bulb of this control. A dent or deformation will change the calibration and cause the control to cycle at a temperature lower than the dial setting. When the bulb mounting clip is used to mount the bulb near the refrigerant tubing, be sure the sheet metal screw does not pierce the tubing.

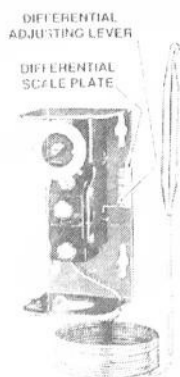


Fig. 1 -- An A19 with external range adjustment and screwdriver slot.

### Adjustments

The A19 temperature controls may be supplied with an external range adjustment and screwdriver slot as shown in Fig. 1, range adjustment knob or solid cover. Solid cover models with calibrated dial are adjusted by removing the cover and moving dial so the desired setting is in line with the dial pointer on the stop bracket. (See Fig. 5.) Convertible adjustment models can be field converted from concealed screwdriver slot adjustment to knob adjustment or external screwdriver slot adjustment. They are supplied with a snap-in plug in the cover to provide concealed screwdriver slot adjustment. For knob adjustment remove the snap-in plug and press the knob onto the slotted shaft. For external screwdriver slot adjustment remove the snap-in plug. The convertible adjustment models with remote bulb include a bulb mounting clip.

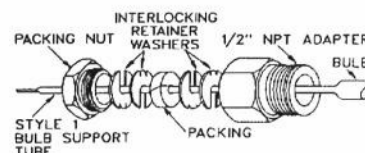


Fig. 2 -- Part No. FTG13A-600R packing nut assembly. (Used with swaged bulb with support tube for direct immersion application.)

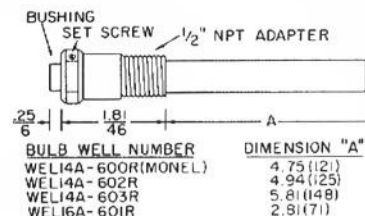


Fig. 3 -- Bulb well for liquid immersion applications where a temperature bulb may be removed without draining tank.

Dial settings normally indicate the cutout setting unless otherwise specified by the equipment manufacturer. Models with SPDT contacts are normally set so the red (common) to yellow contacts open at the dial setting.

Models with adjustable differential and ranges of 20/80°F (-5/28°C), -30/50°F (-35/10°C) and -30/100°F (-35/40°C) have a differential scale plate showing increments of differential. Other ranges have a scale plate with a multiplier. For example when "MIN" differential is 5°F (2.8°C) then x2 is 10°F (5.6°C), x3 is 15°F (8.3°C), etc. The controls are supplied with adjusting lever at minimum differential stamped on the control. To adjust move the lever to the differential required.

Low cutout or high cutout stop supplied on certain models (specified by the equipment manufacturer).

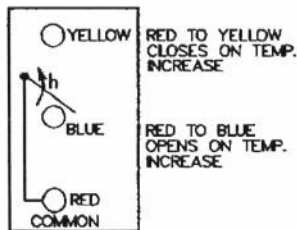


Fig. 4 -- Terminal arrangement of SPDT models.

If high or low cutout stop adjustment is required proceed as follows:

1. Set dial to temperature at which stop is desired.
2. Remove cover of the control.
3. Loosen the cutout stop screw, slide the screw to the front of the temperature control against the plastic step behind the dial and tighten the screw. (See Fig. 5.) Sometimes an exact stop setting is not possible and stop must be set to the closest stop corresponding to dial setting required.
4. Replace cover.

### Wiring

**CAUTION:** Disconnect power supply before wiring connections are made to avoid possible electrical shock or damage to equipment.

All wiring should conform to the National Electrical Code and local codes. Single-pole, double-throw models should be wired as shown in Fig. 4. Use copper conductor only.

**CAUTION:** Use terminal screws furnished (8-32 x 1/4 in. binder head). Substitution of other screws may cause problems in making proper connections.

### Checkout Procedure

Before applying power, make sure installation and wiring connections are according to job specifications. After the necessary mechanical adjustment and electrical connections have been made, an operational checkout is recommended.

Adjust the control setpoint to put the system in operation and observe at least three complete operating cycles to be sure that all components are functioning correctly.

If the system fails to operate, recheck the wiring and components.

### Repairs and Replacement

Field repairs must not be made. For a replacement control contact the nearest Johnson Controls representative.

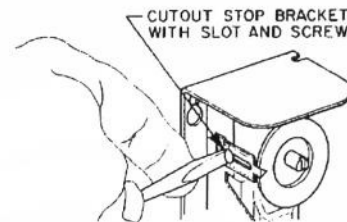


Fig. 5 -- All models have a screw type cutout stop. The stop screw must be loosened and moved to the stop setting desired. Tighten screw after setting is made.

#### European Single Point of Contact:

JOHNSON CONTROLS  
WESTENDHOF 3  
45143 ESSEN  
GERMANY

#### NA/SA Single Point of Contact:

JOHNSON CONTROLS  
507 E MICHIGAN ST  
MILWAUKEE WI 53202  
USA

#### APAC Single Point of Contact:

JOHNSON CONTROLS  
C/O CONTROLS PRODUCT MANAGEMENT  
NO. 22 BLOCK D NEW DISTRICT  
WUXI JIANGSU PROVINCE 214142  
CHINA

JOHNSON  
CONTROLS

Controls Group  
507 E. Michigan Street  
P.O. Box 423  
Milwaukee, WI 53202

Printed in U.S.A.

ENGLISH

**CAUTION: ON ROUGH MOUNTING SURFACE USE  
TOP TWO MOUNTING HOLES ONLY**

WHEN YOU MOUNT THIS CONTROL ON AN UNEVEN SURFACE AND PULL ALL  
FOUR MOUNTING SCREWS DOWN TIGHT. YOU CAN TWIST THE CASE ENOUGH  
TO AFFECT THERMOSTAT CALIBRATION AND OPERATION.

ESPAÑOL

**PRECAUCION: UTILICE UNICAMENTE LOS DOS ORIFICIOS  
DE MONTAJE SUPERIORES, PARA LA INSTALACION DEL CONTROL  
SOBRE SUPERFICIES IRREGULARES.**

CUANDO COLOQUE ESTE CONTROL SOBRE UNA SUPERFICIE IRREGULAR Y  
APRIETE LOS CUATRO TORNILLOS DE MONTAJE. LA CAJA DEL CONTROL SE  
PUEDE DEFORMAR LO SUFICIENTE COMO PARA AFECTAR LA CALIBRACION  
Y OPERACIONES DEL TERMOSTATO.

FRANCAIS

**ATTENTION: SUR UNE SURFACE INÉGALE UTILISER  
SEULEMENT LES DEUX TROUS DE MONTAGE SUPÉRIEURS.**

LORS DU MONTAGE DE CE RÉGULATEUR SUR UNE SURFACE INÉGALE,  
ET LE SERRAGE DES QUATRE VIS DE MONTAGE. VOUS POUVEZ TORDRE  
L'UNITÉ SUFFISAMMENT POUR AFFECTER L'ÉTALONNAGE ET  
LE FONCTIONNEMENT DE CE THERMOSTAT.

FORM 997-76-2