


W10285625 pg12

Instruction Sheet For Applying Grease to the Rear Tub

Before installing the service rear tub, grease must be applied to the bearing.
See below for instructions.

GREASE THE SURFACE OF THE INNER BALL
BEARING RING WHERE THE DRUM SHAFT
COMES THROUGH THE BEARING

GREASE BOTH SEALING LIPS

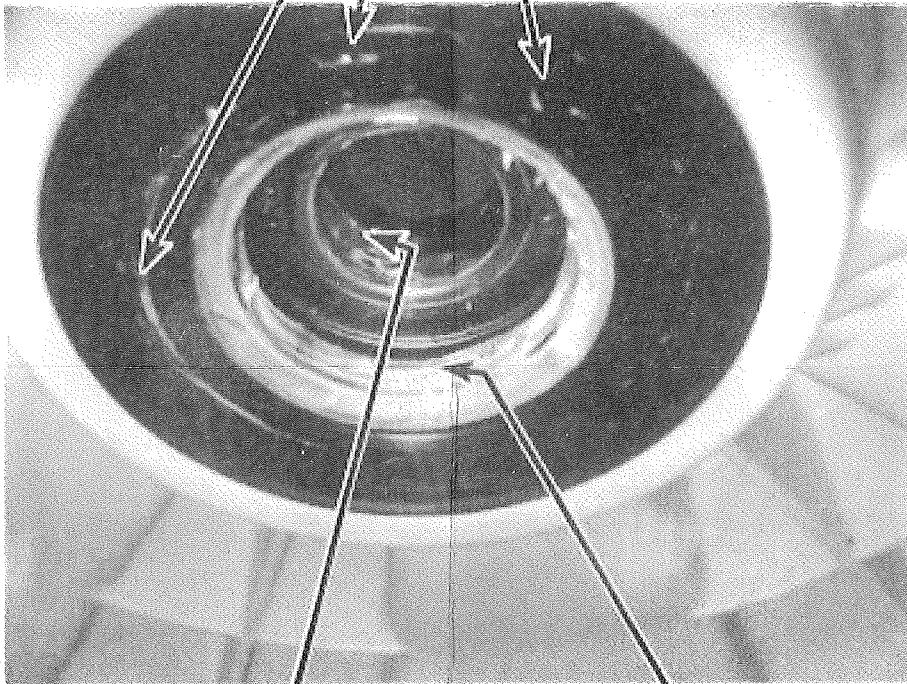

DO NOT GREASE THIS AREA OF THE SEAL,
THE GREASE WILL SOIL THE LAUNDRY

IMPORTANT: Do not apply too much grease into the space between the bearing and the seal, this may close the drain channel of the hub.


Fiche d'instructions

Lubrification de la cuve (arrière)

Avant l'installation de la cuve arrière (réparation), on doit lubrifier le palier. Voir les instructions ci-dessous.

LUBRIFIER LES DEUX LÈVRES
D'ÉTANCHEITÉ

LUBRIFIER LA SURFACE DE LA
BAGUE INTERNE DU ROULEMENT, OÙ
L'ARBRE DE LA CUVE TRAVERSE LE
ROULEMENT

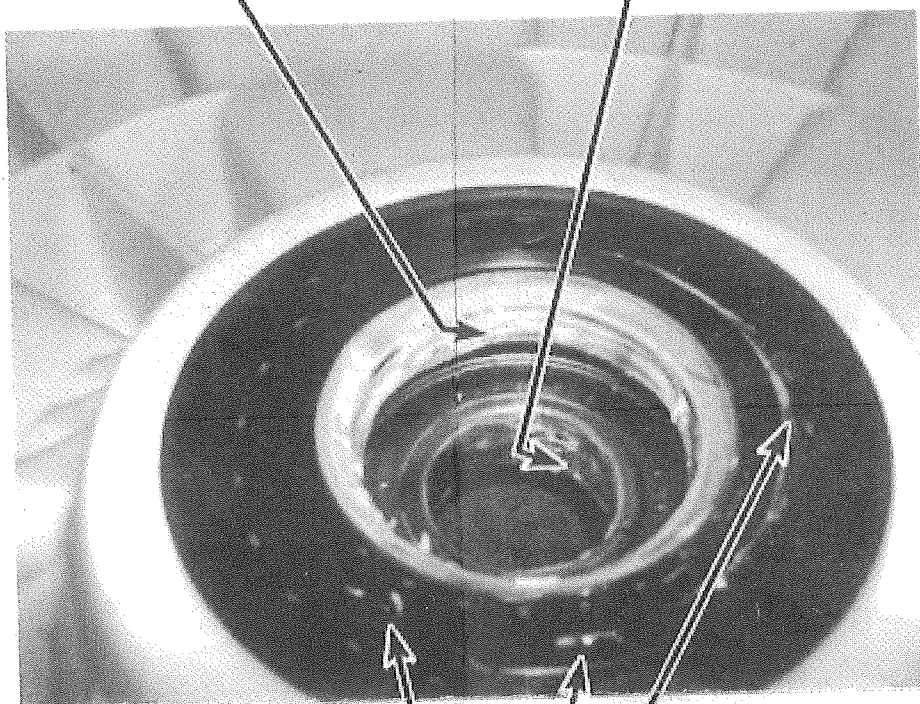

NE PAS LUBRIFIER CES ZONES DU JOINT; LA
GRAISSE TACHERAIT LE LINGE

IMPORTANT : Ne pas appliquer trop de graisse dans l'espace entre le palier et le joint; ceci pourrait obturer le canal d'écoulement du moyeu.