

# Instruction Sheet

## for Adding Grease to Diverter Shaft

### ⚠ WARNING



#### Electrical Shock Hazard

Disconnect power before servicing.  
Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.

Be sure to disconnect power before servicing.

Apply grease to the top half of plastic shaft, grease must be applied uniformly to cover the diameter of the shaft. See *Figure 1*.

**NOTE:** This grease must not be used on any other components.

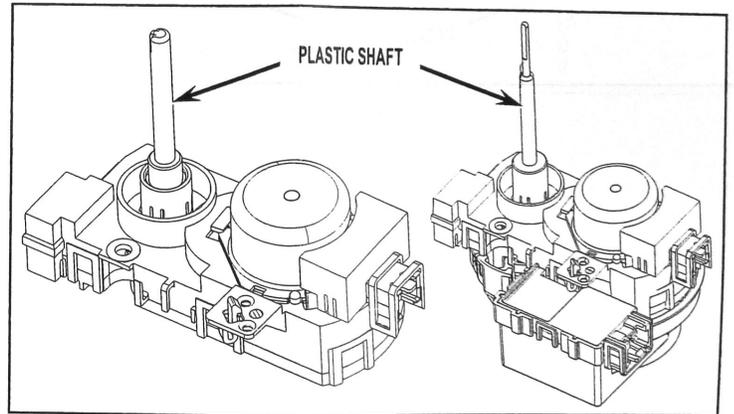


FIGURE 1

Instruction Sheet W10843645 Rev A 10/15

©Whirlpool Corporation 2015  
(All Rights Reserved)

# Fiche d'instructions

## pour le graissage de l'axe du clapet de diversion

### ⚠ AVERTISSEMENT



#### Risque de choc électrique

Déconnecter la source de courant électrique avant l'entretien.

Replacer pièces et panneaux avant de faire la remise en marche.

Le non-respect de ces instructions peut causer un décès ou un choc électrique.

S'assurer de déconnecter la source de courant électrique avant d'entreprendre l'intervention.

Graisser la moitié supérieure de l'axe en plastique, la graisse doit être appliquée d'une manière homogène pour recouvrir le diamètre de l'axe. Voir *Figure 1*.

**REMARQUE :** Cette graisse ne doit être utilisée sur aucun autre composant.

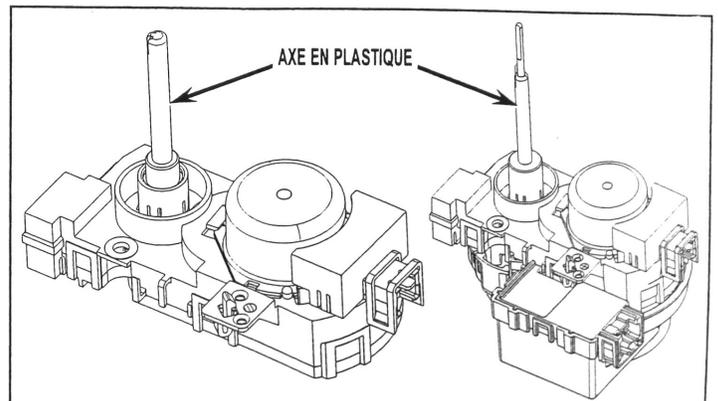


FIGURE 1

Fiche d'instructions W10843645 Rév A 10/15

©Whirlpool Corporation 2015  
(Tous droits réservés)