

INSTRUCTIONS TO USE THE NEW ICE MAKER KIT 5303918277 IN ATOP FREEZER REFRIGERATOR BUILT FOR THE OLD ICE MAKER WITH THE CONNECTOR AT THE FRONT


TO INSTALL IN A REFRIGERATOR WITH A REAR MOUNTED CONDENSER


- REMOVE THE OLD ICE MAKER.
- 2. MODELS WITH REAR MOUNTED CONDENSER USE THE ADAPTOR ILLUSTRATION BELOW TO CONNECT THE NEW ICE MAKER TO THE HARNESS IN THE REFRIGERATOR.

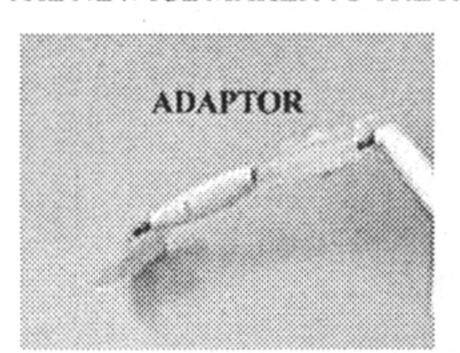


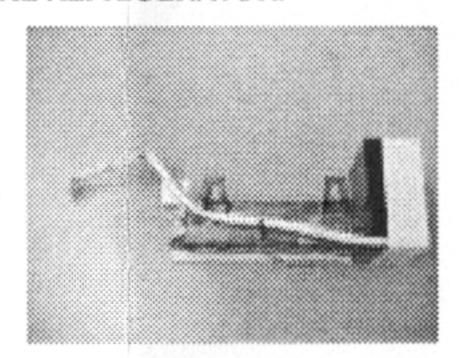


3. REMOVE THE TOP CLAMP HOLDING THE WIRE HARNESS TO THE BACK OF THE CABINET. PULL THE EXCESS WIRE OUT THE BACK OF THE CABINET UNTIL THE CONNECTOR IS AGAINST THE EVAPORATOR COVER. REINSTALL THE CLAMP TO HOLD THE WIRE IN PLACE.

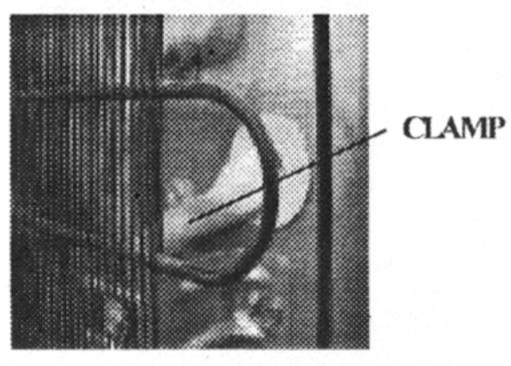


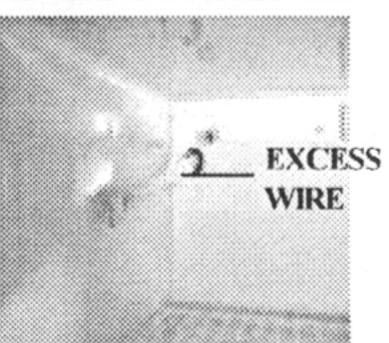

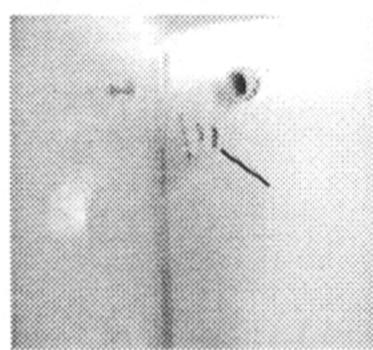



FOLD THE WIRING AS SHOWN IN THE ILLUSTRATION BELOW USING WIRE TIE TO HOLD IN PLACE MAKING SURE TO KEEP WIRE AWAY FROM MOLD HEATER.

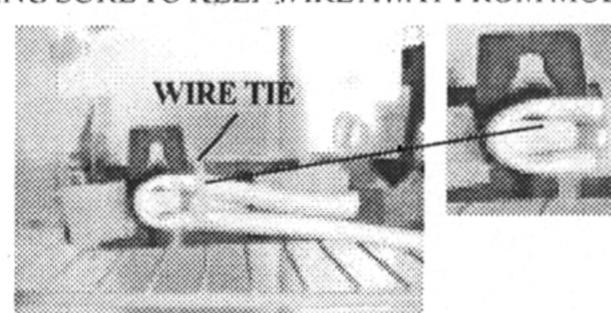

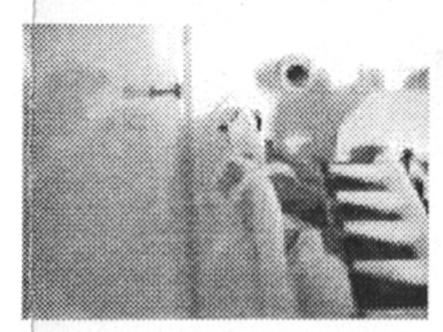


5. INSTALL THE ICE MAKER IN FREEZER MAKING SURE NOT TO PULL WIRE OUT OF TIE AND ALLOW TO HANGE BELOW THE ICE MAKER.

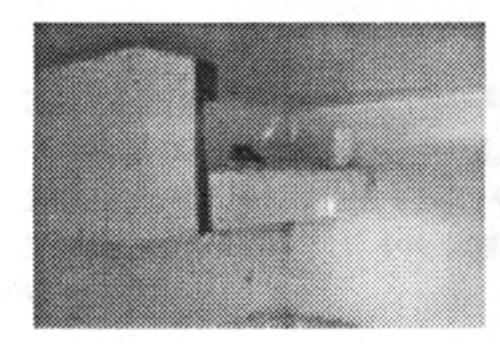

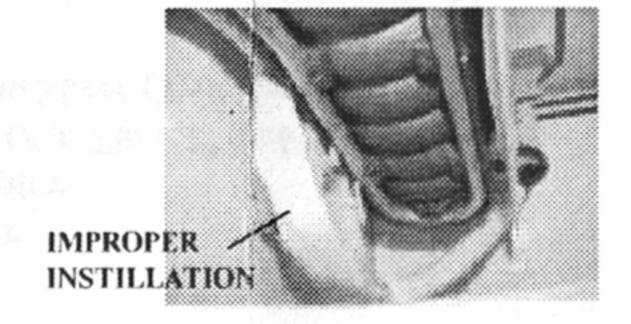

6. ADJUST THE FILL TIME ON THE ICE MAKER TO 7 1/2 SECONDS FROM THE 6 1/2 FACTORY SETTING BY TURNING THE WATER FILL ADJUSTMENT SCREW 1/2 TURN COUNTERCLOCKWISE

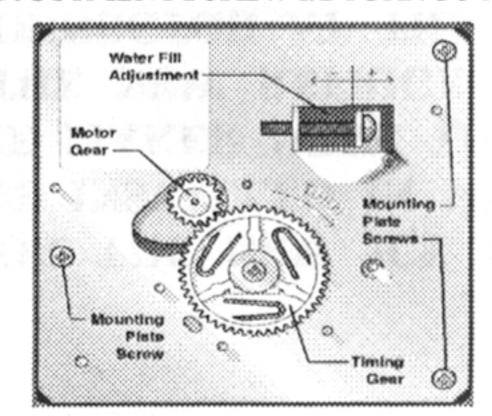



Instruction Sheet 5303950186 Rev. 5/02

INSTRUCTIONS TO USE THE NEW ICE MAKER KIT 5303918277 IN A SIDE BY SIDE REFRIGERATOR BUILT FOR THE OLD ICE MAKER WITH THE CONNECTOR AT THE FRONT


TO INSTALL IN A REFRIGERATOR WITH FORCED AIR CONDENSER.

- REMOVE THE OLD ICE MAKER.
- 2. MODELS WITH FORCED AIR CONDENSER USE THE ADAPTOR ILLUSTRATION BELOW TO CONNECT THE NEW ICE MAKER TO THE HARNESS IN ADAPTOR FROM THE OLD ICE MAKER.

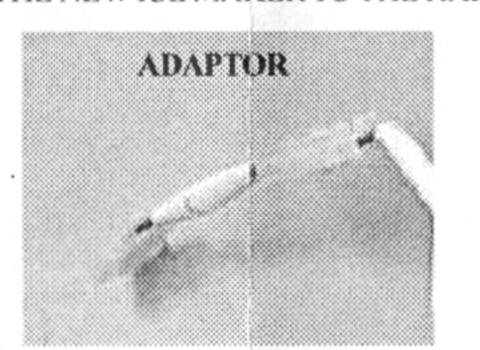

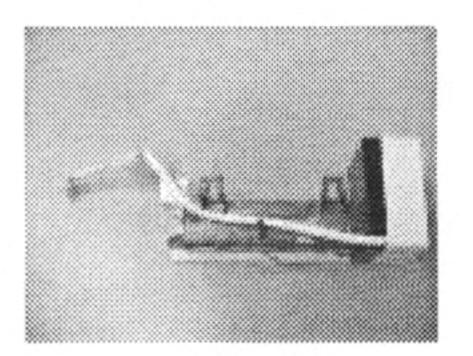


PUSH THE EXCESS WIRE OUT THE OPENING IN THE UPPER COVER UNTIL THE CONNECTOR IS AGAINST THE UPPER COVER

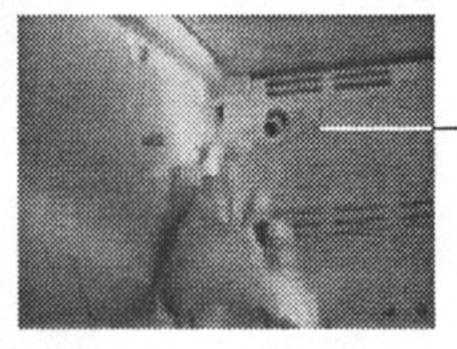


EXCESS WIRE


4. FOLD THE WIRING AS SHOWN IN THE ILLUSTRATION BELOW USING WIRE TIE TO HOLD IN PLACE MAKING SURE TO KEEP WIRE AWAY FROM MOLD HEATER.

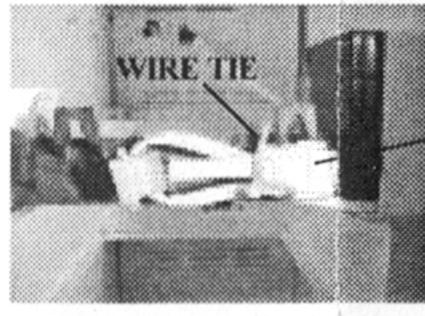




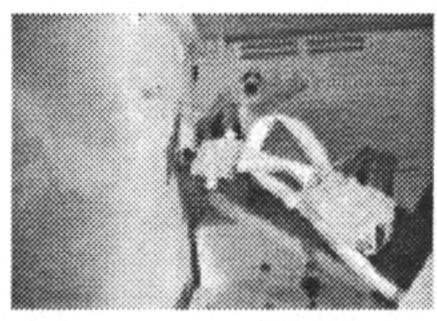

INSTALL THE ICE MAKER IN FREEZER MAKING SURE NOT TO PULL WIRE OUT OF TIE AND ALLOW TO HANGE BELOW THE ICE MAKER.

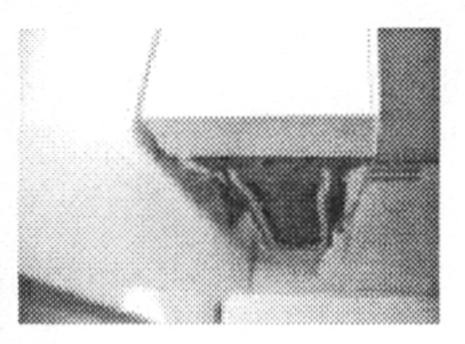

6. ADJUST THE FILL TIME ON THE ICE MAKER TO 7 1/2 SECONDS FROM THE 6 1/2 FACTORY SETTING BY TURNING THE WATER FILL ADJUSTMENT SCREW 1/2 TURN COUNTERCLOCK WISE

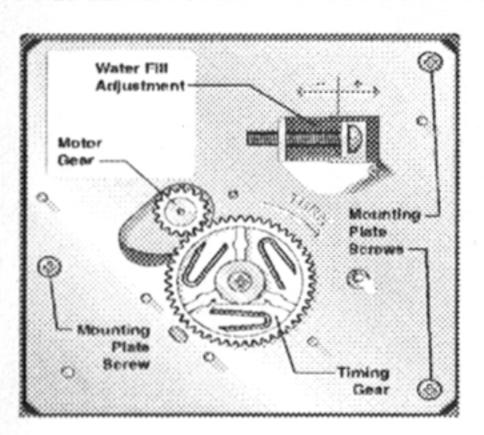

Instruction Sheet 5303950186 Rev. 5/02