Replacing WFMC/WFXD washer door gaskets


Use door gasket **667487** for washers FD8710 & later*. Use door gasket kit **667489** instead of door gasket **445193** for washers FD8505 – FD8709**. Use door gasket kit (w/ holder) **246270** instead of door gasket kit **243834** (all FD), door gasket **445193** (washers FD8502 - FD8504) & door gasket **436459** w/ flushing hose nipple (washers FD8501 & earlier). Gasket holder **471561** has a gasket **436459** w/ flushing hose nipple (washers FD8501 & earlier). Attach kit warning and advice slot for the gasket clamp spring to insure the gasket won't come off. Attach kit warning and advice labels to replacement gasket holder.

Door Gasket Kit 246270




Kit 246270 contains door gasket 667487, gasket holder 471561, front/rear gasket clamps, U.S. warning label & advice label.


Stowing Flushing Hose (FD8501 & earlier)

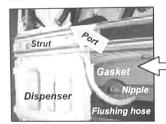

Loosen / remove flushing hose clamp & remove hose from gasket (seal / boot).

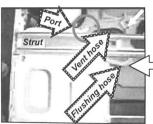


Route flushing hose under strut & black tub vent hose. Note spare dispenser port (for hose end taken from gasket).

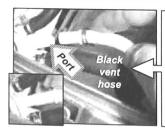

All gasket holder kits (246270 /

Push flushing hose onto spare dispenser port. Hose has little water pressure and shouldn't leak --install hose clamp if desired (175764).

Installing Spring Clamps (all FD #'s)

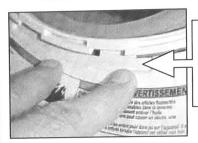


Kit gasket holder has a slot for gasket clamp spring. Older gasket holders don't have this slot.

Make sure spring portion of clamp rests in gasket holder slot to make sure gasket doesn't slide off.



So clamp doesn't pull gasket off gasket holder, hold clamp next to gasket holder.

To install spring clamp, carefully pull spring to right & put clamp into right side gasket notch.

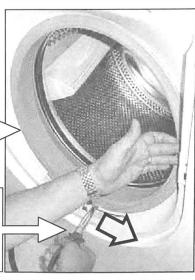



Warning Advice label

Locating WFMC-WFXD Warning & Advice Labels (all FD #'s)



Attach orange warning label on gasket holder directly underneath door (at 6:00 position). Don't place label into spring clamp slot.



Attach advice label on gasket holder to right of warning label.

Replacing WBB World Washer door gaskets

Use door gasket 667487 for washers FD8710 & later. Use door gasket kit 667489 instead of door gasket 445193 for washers FD8505 – FD8709. Use door gasket kit (with holder) 246270 instead of door gasket 445193 for washers FD8504 & earlier. Gasket holder 471561 has a slot for the gasket clamp spring to insure the gasket won't come off. Attach kit advice label to replacement gasket holder.

Door Gasket Kit 246270



Kit 246270 contains door gasket 667487, holder gasket front/rear 471561. gasket clamps, U.S. label warning advice label.

Washers needing 246270 kit:

- WBB24750 (FD8504 & earlier)
- WBB24750EE (FD8504 & earlier)
- WBB24750EU (FD8504 & earlier)
- WBB24750FF (FD8504 & earlier)
- WBB24759GB (FD8504 & earlier)

Washers not needing 246270 kit:

- Any WBB2475x (FD8505 & later)
- WBB24750AU
- WBB24750IT
- WBB24750NL
- WBB24750TI

Locating WBB Advice Label (all FD #'s)




Attach advice label on gasket holder directly underneath door (at 6:00 position). Don't place label into spring clamp slot.

Installing Spring Clamps (all FD #'s)


Kit gasket holder has a slot for gasket clamp spring. Older gasket holders don't have this slot.

warning Orange shown is for U.S. variants.

Make sure spring portion of clamp rests in gasket holder slot to sure gasket make doesn't slide off.

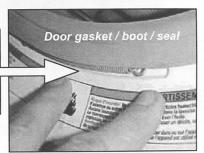

So clamp doesn't pull gasket gasket holder, hold clamp next to gasket holder.

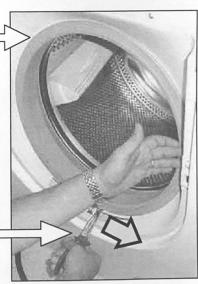

install spring clamp, carefully pull spring to right & put clamp into right side gasket notch.



Orange warning label is for U.S. variants. For WBB washers, discard orange warning label.

to