


SLOAN FLUSHMATE

30075 RESEARCH DR. • NEW HUDSON, MI 48165 1-800-533-3460

Genuine Flushmate Repair Parts

LOWER SUPPLY BL100504-3-KIT

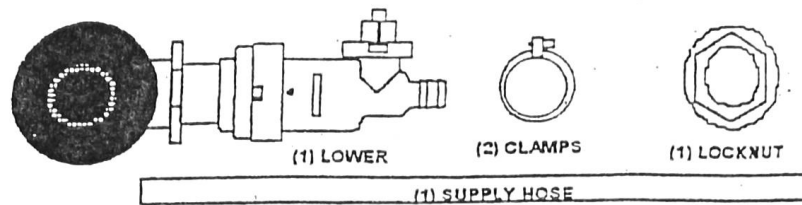

Please read all of the instructions prior to starting this replacement and use only simple hand tools.

Please note the installation positions of the components prior to removing them as this is the position that the replacements should be reinstalled to.

Remove all old parts by turning in a counter clockwise direction. Install all new parts by turning in a clockwise direction.

When installing hoses on to fittings, make sure to push the hose all the way on the fitting before tightening the hose clamp.

Always turn water off and flush toilet before making any changes.

Disconnect the water line from the bottom of the tank enclosure.

In order to replace the Lower Supply, the Flushmate Unit must be removed from the china tank enclosure. Once the Flushmate Unit is removed follow the instructions below.

- 1) Carefully remove the lower supply from the bottom of the tank by pulling down. This will remove it from the post on the bottom of the tank.
- 2) Carefully cut the hose as close to the lower supply as possible. There should be enough hose length to allow reconnection to the new lower supply — If too much hose is cut the reconnection to the bottom of the Flushmate Tank might not be possible. When the hose is too short, use the replacement hose supplied. When using the replacement hose the hose must also be removed from the upper supply.
- 3) Reinstall the hose completely onto the hose fitting at the end of the lower (and upper, if the replacement hose has been used), and secure using the screw clamps provided. Be sure to install the clamps in the center of the hose fitting.
- 4) Install the lower supply back on the post on the bottom of the Flushmate Tank.
- 5) Reinstall the Flushmate Unit back into the china enclosure and install the new supplied lower supply shank locknut.
- 6) Install the china enclosure on the china bowl, reconnect the water line and turn the water on and check for any leaks around the hoses, locknut or water line connections.

For additional installation instructions please refer to the service manual that was shipped with your Flushmate unit or call 1-800-533-3460

