

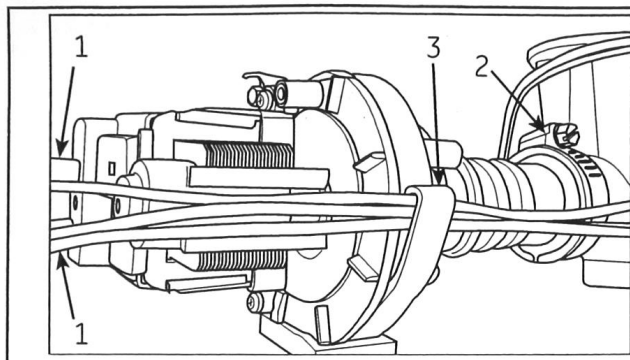



Installation/Instruction Sheet for: Replacing WD26X10042 w/ WD26X10048

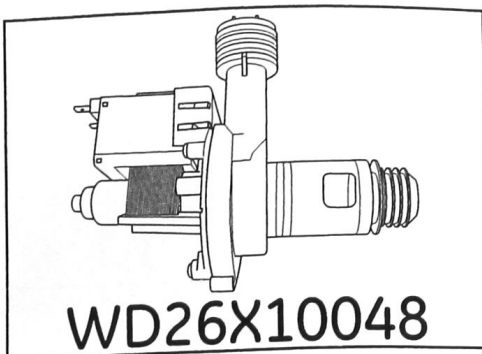

Electrical Shock Hazard
Disconnect power before servicing

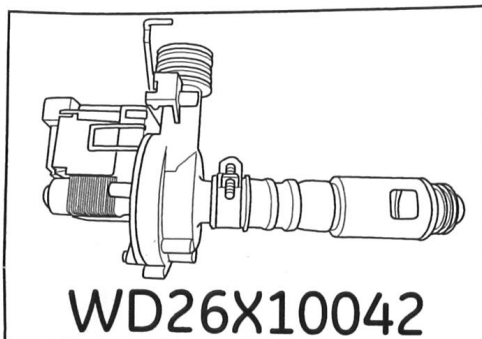


1. Disconnect harness wires from pump terminals.
2. Loosen clamp.
3. Remove wires from retaining tab on pump housing.
4. Remove pump & adaptor assembly from sump boot.

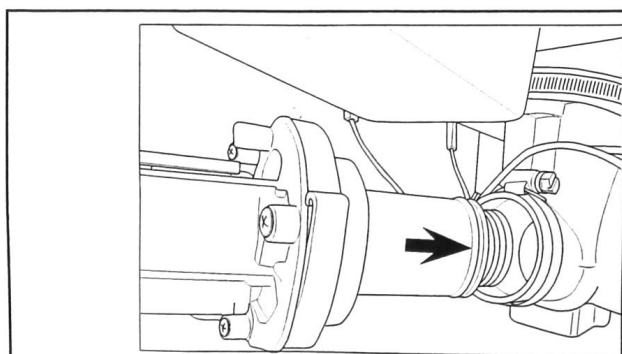

5. Replace with new WD26X10048 pump assembly.

Note: New pump will not have wire hanger to connect pump to the rear brace of dishwasher. Pump is solely supported at sump boot.

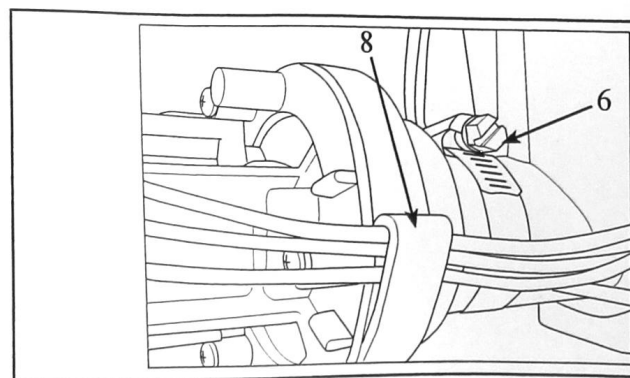

6. Tighten clamp.
7. Connect the harness wires to pump terminals
8. Slide the remaining loose wire from harness into the retaining tab on pump housing.