

Instruction Sheet

Tub Support Top Seal Replacement

WARNING



Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before
operating.

Failure to do so can result in death
or electrical shock.

1. When replacing the tub support top seals, the washer may contain (1) one or (2) two seals. If the washer contains (2) two seals (See *Figure 1*), be sure to remove both seals, only (1) one of the new redesigned seals will be required to replace the (2) seals removed (See *Figure 2*). If the washer already contains (1) one top seal, replace as shown in *Figure 2*.

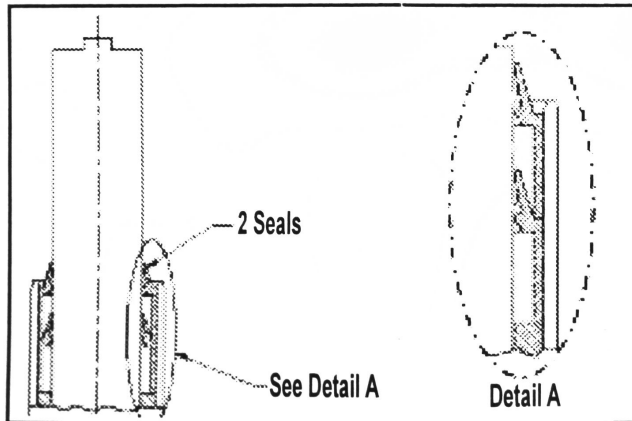


Figure 1

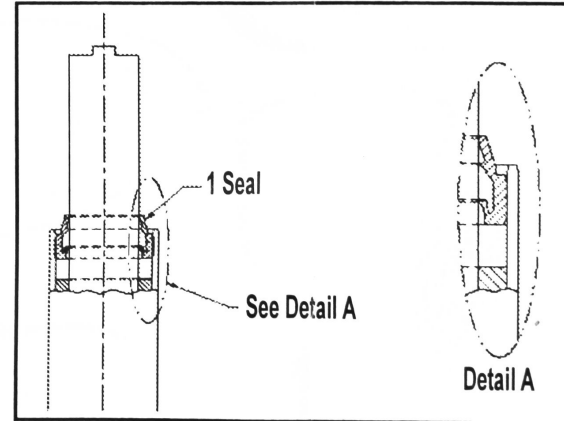


Figure 2