

smartlockproⁿ

Installing and Testing a GFCI Receptacle

Please read this leaflet completely before getting started.

3. Should you install it?

receptacle.

Make sure that you:

techniques

Installing a GFCI receptacle can be more

complicated than installing a conventional

Understand basic wiring principles and

Are prepared to take a few minutes to test

your work, making sure that you have wired

Can interpret wiring diagrams

Have circuit wiring experience

the GECI recentacle correctly

· To prevent severe shock or electrocution always turn the power OFF at the service panel before working with wiring.

A CAUTION

· Use this GFCI with copper or copper-clad wire. Do not use it with aluminum wire.

· Do not install this GFCI receptacle on a circuit that powers life support equipment because if the GFCI trips it will shut down the equipment.


· For installation in wet locations, protect the GFCI receptacle with a weatherproof cover that will keep both the receptacle and any plugs dry.

 Must be installed in accordance with national and local electrical codes.

PK-93792-10-00-2A

4 LINE vs LOAD

A cable consists of 2 or 3 wires.



LINE cable:

Delivers power from the service panel (breaker panel or fuse box) to the GFCI. If there is only one cable entering the electrical box, it is the LINE cable. This cable should be connected to the GFCI's LINE terminals only.

LOAD cable:

Delivers power from the GFCI to another recentacle in the circuit. This cable should be connected to the GFCI's LOAD terminals only.

The LOAD terminals are under the yellow sticker. Do NOT remove the sticker at this time

5. Turn the power OFF

1. What is a GFCI?

A GFCI receptacle is different from

Definition of a ground fault:

surface, such as a wood floor

NOTE:

the GECI

conventional receptacles. In the event of a ground fault, a GFCI will trip and quickly stop the flow of electricity to prevent serious injury.

Instead of following its normal safe path, electricity passes through a person's body to

reach the ground. For example, a defective

A GFCI receptacle does NOT protect against

circuit overloads, short circuits, or shocks. For

example, you can still be shocked if you touch bare wires while standing on a non-conducting

GFCI's contain a lockout feature that will prevent

There is no power being supplied to

the LINE and LOAD connections.


The GFCI is miswired due to reversal of

indicating that it may not be able to provide protection in the event of a ground fault.

The GFCI cannot pass its internal test

appliance can cause a ground fault.

Plug an electrical device, such as a lamp or radio, into the receptacle on which you are working. Turn the lamp or radio ON. Then, go to the service panel. Find the breaker or fuse that protects that receptacle. Place the breaker in the OFF position or completely remove the fuse. The lamp or radio must turn OFF.



Next, plug in and turn ON the lamp or radio at the receptacle's other outlet to make sure the power is OFF at both outlets. If the power is not OFF, stop work and call an electrician to complete the installation

6. Identify cables/wires

2. The GFCI's features

Receptacle

RESET

button:

TEST

button:

Outlet

See step 8

See step 8

Self-Ground

Mounting

Bracket

FRONT VIEW

(a)

RESET

lo.

0

DO NOT install the GFCI receptacle in an electrical box containing (a) more than four (4) wires (not including the grounding wires) or (b) cables with more than two (2) wires (not including the grounding wire). Contact a qualified electrician if either (a) or (b) are true

you are replacing an old receptacle, pull it out of the electrical box without disconnecting the

- If you see one cable (2-3 wires), it is the LINE cable. The receptacle is probably in position C (see diagram to the right). Remove the receptacle and go to step 7A
- If you see two cables (4-6 wires), the receptacle is probably in position A or B (see diagram to the right). Follow steps a-e of the procedure to the right.

Procedure: box with two (2) cables (4-6 wires):

Back wire holes

(a) Detach one cable's white wire and hot wires from the receptacle and cap each one separately with a wire connector. Make sure that they are from the same

Hot terminal (Brass or Black):

Connection for the LINE

cable's black wire

covers the LOAD

terminals. Do not

remove the sticker at this time

A vellow sticker

LOAD

Hot terminal

black wire

Green/Red Status

Indicator Light

(Brass or Black)

the LOAD cable's

Connection for

- (b) Re-install the receptacle in the electrical box, attach faceplate, then turn the power ON at the service panel.
- Determine if power is flowing to the receptacle. If so, the capped wires are the LOAD wires. If not, the capped wires are the LINE wires.
- (d) Turn the power OFF at the service panel. label the LINE and LOAD wires, then remove the receptacle.
- (e) Go to step 7B.

Placement in circuit:

BACK VIEW

LOAD

 \circ

6

MO

The GFCI's place in the circuit determines if it protects other receptacles in the circuit

Screw (terminal) colors:

LINE

LOAD

Green = grounding terminal

Brass or Black = HOT terminals

Silver = WHITE terminals

White terminal (Silver):

White terminal (Silver):

Grounding Terminal (Green):

Connection for bare


copper or green wire

Connection for the LOAD cable's white wire

cable's white wire

Connection for the LINE


Sample circuit:




Placing the GFCI in position A will also receptacles B and C. On the other hand, placing the GFCI in position C will not provide protection to receptacles A or B. Remember that receptacles A, B, and C can be in different rooms.

7. Connect the wires (choose A or B)... only after reading other side completely A: One Cable (2 or 3 wires) entering the box OR

B: Two cables (4 or 6 wires) entering the box

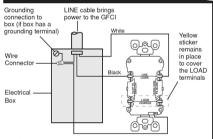




Connect the LINE cable wires to the LINE terminals The white wire connects to the WHITE terminal (Silver)

- The black wire connects to the HOT terminal (Brass or Black) Connect the grounding wire (only if there is a grounding wire):
- For a box with no grounding terminal (diagram not shown): Connect the LINE cable's bare copper (or GREEN) wire directly to the grounding terminal on the GFCI receptacle. For a box with a grounding terminal (diagram shown above): Connect a 6-inch bare copper (or GREEN) 12 or 14 AWG wire to the grounding terminal on the GFCI. Also connect a similar wire to the grounding terminal on the box. Connect the ends of these wires to the LINE cable's bare copper (or GREEN) wire using a wire connector.

If these wires are already in place, check the connections. Complete the installation:

Fold the wires into the box, keeping the grounding wire away from the WHITE and HOT terminals. Screw the receptacle to the box and attach the faceplate

Go to step 8.

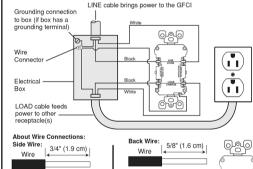

Connect the LINE cable wires to the LINE terminals:

The white wire connects to the WHITE terminal (Silver)
The black wire connects to the HOT terminal (Brass or Black) Connect the LOAD cable wires to the LOAD terminals:

Remove the YELLOW sticker to reveal the LOAD terminals. The white wire connects to the WHITE terminal (Silver)

The black wire connects to the WTH retiminal (Grass or Black)
Tonect the grounding wires (only if there is a grounding wire):
Connect a 6-inch bare copper (or GREEN) 12 or 14 AWG wire to the grounding terminal on the

GFCI. If the box has a grounding terminal, also connect a similar wire to the grounding terminal on the box. Connect the ends of these wires to the LINE or LOAD cable's bare copper (or GREEN) wire using a wire connector. If these wires are already in place, check the connections Complete the installation:

For Back wire

conductor ONLY

Insert hare wire fully and

tighten terminal clamp on

Fold the wires into the box, keeping the grounding wire away from the WHITE and HOT

terminals. Screw the receptacle to the box and attach the faceplate

8. Test your work

For Side wire

way around screw

Loop clockwise 2/3 of the

(B)

Why perform this test?

- If you miswired the GFCI it may not prevent personal injury or death due to a ground fault (electrical shock).
- If you mistakenly connect the LINE wires to the LOAD terminals, the GFCI will not reset and will not provide power to either the GFCI receptacle face or any receptacles fed from the GFCI

- (a) This GFCI is shipped from the factory in the tripped condition and cannot be reset until it is wired correctly and power is supplied to the device. Plug a lamp or radio into the GFCI (and leave it plugged correctly and power is supplied to fine device. Fing a fairly or fault into the EFC (and weave it pin). Turn the power ON at the service panel. Ensure that the GFC is still in the tripped condition by pressing the TEST button. If the lamp or radio is OFF, and the GFCI will not reset, go to the Troubleshooting section as the Line and Load connections are reversed.
- Troubleshooming section as the Line and Load comections are reversed.

 (b) Press the RESET button fulfully and release. If the Status Indicator Light turns Green and the lamp or radio is ON, the GFCI has been installed correctly. If the Status Indicator Light turns or continuously blinks Red, or the GFCI cannot be reset, go to the Self-Test Operation section.

 (c) If you installed your GFCI using step 7B, plug a lamp or radio into surrounding receptacles to see which
- none(s), in addition to the GFCI, lose power when you press the GFCI TEST button. Place a "GFCI reset the GFCI DO NOT plug life saving devices into any of the receptable that Ist prover, then press the REST button to reset the GFCI. DO NOT plug life saving devices into any of the receptacles that lost power.
- (d) Press the TEST button (then RESET button) every month to assure proper operation. If the Status Indicator Light does not turn Green when the RESET button is degressed and then released, or the GFCI cannot be reset, it must be replaced.

TROUBLESHOOTING

Turn the power OFF and check the wire connections against the appropriate wring diagram in step 7A or 7B. Make sure that there are no loose wires or loose connections. If the Status Indicator Light is not ON and the device is unable to reset this could be a result of no power available. Start the test from the beginning of step 8 if you revised any connections to the GFCI.

SELF-TEST OPERATION

A Self-Test GFCI receptacle has all the features of a conventional GFCI receptacle. In addition, this receptacle tests itself periodically to confirm the GFCI electronics are functional. The Status Indicator Light will be solid green when the GFCI is powered from Line side and working correctly.

Self-Test Indications: If the Status Indicator Light is solid of flashing RED a problem may exist. Presen the TEST button to trip the GFCI. If unable to Reset, replace the GFCI, NOTE: The status indicator may flash Red at power "ON" and Reset.

elf Test Cat. No.	Description
FNT1	15A-125VAC, 60Hz Non-Tamper Resistant GFCI
FNT2	20A-125VAC, 60Hz Non-Tamper Resistant GFCI
FTR1	15A-125VAC, 60Hz Tamper Resistant GFCI
FTR2	20A-125VAC, 60Hz Tamper Resistant GFCI
FWR1	15A-125VAC, 60Hz Weather Resistant GFCI
FWR2	20A-125VAC, 60Hz Weather Resistant GFCI
FWT1	15A-125VAC, 60Hz Weather/Tamper Resistant GFCI
FWT2	20A-125VAC, 60Hz Weather/Tamper Resistant GFCI
conc	ODA ADELIAC COLLE DISSISSES OF OL

TY AND EXCLUSIONS

Test Cat. No.	Description	LIMITED 2 YEAR WARRAN Leviton warrants to the original consumer purchaser and at the time of its sale by Leviton is free of defects in mai use for two years from the purchase date. Leviton's or	
lT1	15A-125VAC, 60Hz Non-Tamper Resistant GFCI		
IT2	20A-125VAC, 60Hz Non-Tamper Resistant GFCI or replacement, at its option. For details visit	or replacement, at its option. For details visit www.ler excludes and there is disclaimed liability for labor for rem	
'R1	15A-125VAC, 60Hz Tamper Resistant GFCI is void if this product is product is product is product in any manner, or is not abused, or altered in any manner, or is not a		
'R2	20A-125VAC, 60Hz Tamper Resistant GFCI	with any labels or instructions. There are no other merchantability and fitness for a particular purpos	
VR1	15A-125VAC, 60Hz Weather Resistant GFCI	merchantability and niness for a particular purpos applicable jurisdiction, the duration of any such implied a particular purpose, is limited to two years. Leviton is consequential damages, including without limitation lost sales or profits or delay or failure to perform the	
VR2	20A-125VAC, 60Hz Weather Resistant GFCI		
VT1	15A-125VAC, 60Hz Weather/Tamper Resistant GFCI	herein are the exclusive remedies under this warran	
T2 20A-125VAC, 60Hz Weather/Tamper Resistant GFCI		For Technical Assistance Call: 1- 1 800 405-5320 (Canada Or	
RBF	20A-125VAC, 60Hz Blankface GFCI	SmartlockPro is a Trademark of Leviton Manuf	
fouriers rated 20A food through		Strate Canada Mavice and China	

-800-824-3005 (U.S.A. Only) nly) www.leviton.com

facturing Co., Inc. registered in the United

FCC STATEMENT

CS STATEMENT is supported by the support of the sup measures: nt or relocate the receiving antenna. the separation between the equipment and receive

nect the equipment into an outlet on a circuit different from that to which the receiver is connected. sult the dealer or an experienced radio/TV technician for help.

IC STATEMENT This device compl

DESTAILMENT IT IT IS A STATE OF THE STATE OF

This product is covered by U.S. Patient Nos. 6,040,967 6,246,556° 6,282,070 6,381,112, 6,437,851 6,646,898 6,657,834 6,788,173 6,884,765° 6,944,001 7,338,456 7,338 7,748 7,877 6,748 7,748 7,747 7,748 7,747 7,748 7,747 7,748 7,747 7,748 7,747 7,748 7,747 7,748 7,74

FOR CANADA ONLY

warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the ention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

PK-93792-10-00-2A